



User Manual

5G NR AX1800 Wi-Fi 6 Mobile Hotspot

Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes.

Manual Revisions

Revision	Date	Description
1.00	09/18/2025	Initial Version
1.01	12/31/2025	Add Battery Disassembly Procedure

Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

Apple®, Apple logo®, Safari®, iPhone®, and Macintosh® are trademarks of Apple Inc., registered in the U.S. and other countries. App StoreSM is a service mark of Apple Inc.

Chrome™ browser, Google Play™ and Android™ are trademarks of Google Inc.

Google, Nest Hub, and Google Home are trademarks of Google LLC.

Internet Explorer®, Windows® and the Windows logo are trademarks of the Microsoft group of companies.

Copyright © 2026 by D-Link Corporation, Inc.


All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation, Inc.

Table of Contents

Product Overview	1	IP Filter	33
Package Contents	1	Virtual Server	34
System Requirements	2	DMZ Settings	35
Safety Warnings	3	Website Filter	36
Introduction	4	Network Tools	37
Hardware Overview	5	System	39
Side View	5	PIN Code Management	44
Front View	5	Log	45
Bottom View	5	Time Zone	46
LED Indicators	6		
Installation	7	Connect a Wireless Client to Your Network	47
Initial Setup	7	WPS Button	47
Wireless Installation Considerations	8	Battery Disassembly	48
Configuration	9	Troubleshooting	52
Initial Connection to the Hotspot	9	Networking Basics	53
Connect via USB	9	Check your IP address	53
Connect via Wi-Fi	10	Statically Assign an IP address	54
Web-based Configuration	12	Technical Specifications	55
Home	14		
Network Settings	16		
Internet Connection	16		
Mobile Network	17		
Updates	30		
DHCP	31		
Security	32		

Product Overview


Package Contents

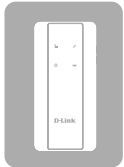

5G NR AX1800 Wi-Fi 6 Mobile Hotspot



USB Type-C Cable

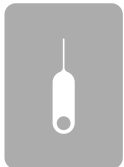

SIM Eject Tool



Quick Installation Guide

If any of the above items are missing or damaged, please contact your reseller.

EU Battery & WEEE Directives Disposal and Recycling

This product contains a battery. Recycle or dispose of batteries in accordance with the battery manufacturer's instructions and local/national disposal and recycling regulations. For more information, please refer to the warranty guide.

System Requirements

Network Requirements	• A compatible Nano SIM/UICC card with mobile data service¹
Web-based Configuration Requirements	Computer with the following: • Windows®, Macintosh, or Linux-based operating system • An installed Wi-Fi interface Browser Requirements: • Microsoft Edge • Mozilla Firefox 28 or higher • Apple Safari 6 or higher • Google Chrome 28 or higher

¹ Subject to services and service terms available from your carrier.

Safety Warnings

- Do not disassemble the product, strike it, crush it, or expose it to fire, water, or ice.
- Do not use or store the product outside the specified safe operating or storage temperature range.
- Do not use the product if the battery swells or becomes deformed.
- Do not puncture, crush, short-circuit, or heat lithium batteries. It may cause fire or explosion.
- Only trained personnel with ESD protection and fire safety equipment may perform repairs.
- Damaged batteries must not be reused or resoldered.
- Do not replace the battery with an incorrect type, as this may compromise safety protections and cause explosion; use only the battery that comes with the product package.
- Do not store the battery in environments subject to extremely high temperatures or low air pressure, which may result in explosion or leakage of flammable liquid or gas.

Introduction

Harnessing ultra-fast 5G mobile and Wi-Fi 6 technology, the D-Link F518 lets you share high-speed mobile Internet connection with multiple PCs and mobile devices. Whether at home or on the go, it provides a stable, high-bandwidth connection with fast upload and download speeds, ensuring convenient wireless access for you and your companions.

High-Speed Mobile Internet with 5G Connectivity

The built-in dual-band Wi-Fi antennas extend coverage for your devices, while WPA3 encryption protects your privacy and blocks attacks.

Share Your Internet On the Go

The F518 makes staying connected on the go easy—just use one mobile connection to get your laptop, phone, tablet, or other wireless devices online. Perfect for travel, it offers ultra-fast Wi-Fi 6 (Wireless AX) coverage, so whether you're on a business trip or vacationing with friends and family, everyone can enjoy fast, reliable Internet regardless of the location.

Easy Setup for Instant Access


Getting online with the F518 is quick and convenient since the device is truly plug-and-play. Simply insert your 5G or 4G/LTE nano SIM card to set up your instant mobile Wi-Fi hotspot. The F518 gives you blazing fast connectivity, all in a powerful yet portable device, that fits easily into your bag or pocket.

Designed for Travel Convenience

The F518 is compact enough to fit in your purse, bag, or pocket, making it easy to carry wherever you go. Its built-in 8000 mAh rechargeable battery delivers nearly a full day of power. Additionally, the device functions as a high-efficiency power bank, providing a 5V/3A output for quick, reliable charging of external devices. Whether you're traveling for business or leisure, the F518 ensures consistent power and connectivity throughout the day..

¹ All references to speed are for comparison purposes only. Actual speeds will vary depending on a range of factors including mobile network coverage, signal strength, network activity, and environmental conditions.


Hardware Overview

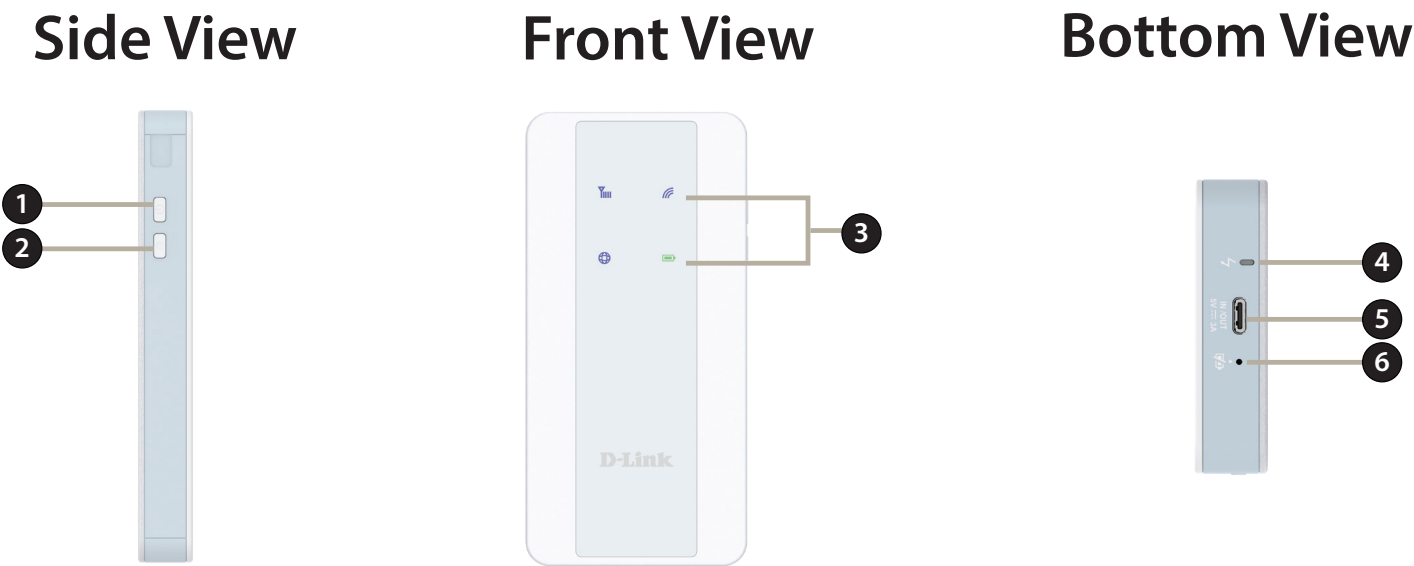

1	Power Button	Press and hold this button for 3 seconds to power on/off the device. To reset the device to its factory default settings, press and hold both the Power and WPS buttons (see below) simultaneously for 10 seconds. When the device starts, all LEDs (refer to next page) will illuminate.
2	WPS Button	Press this button to add new wireless devices quickly and easily using Wi-Fi Protected Setup (WPS). To reset the device to its factory default settings, press and hold both the Power (see above) and WPS buttons simultaneously for 10 seconds.
3	LED Indicators	Status display. Please refer to LED Indicators on page 6 .
4	Battery Charging Status	A solid red light indicates that the battery is charging.
5	USB Type-C with USB Power Delivery (PD 3.0)	Use the included cable to connect to a powered USB port to charge F518, or connect to a computer to access the web-based configuration. This port can also supply 15W power to connected devices.
6	Power Outage Button	Use a paper clip to press the recessed button to force the device to power off and reboot.

Hardware Overview

LED Indicators

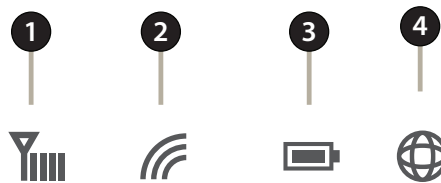

Number	Name	Description	
1	4G/5G Signal Strength	Solid Blue	Strong signal.
		Solid Green	Moderate signal.
		Solid Orange	Weak signal.
		Off	No signal (SIM card absent or not detected).
2	Wi-Fi Indicator	Solid Blue	Wi-Fi is active.
		Fast Blinking Blue	No wireless device connected to the Wi-Fi network.
		Slow Blinking Blue	WPS pairing is in progress.
		Off	Wi-Fi is not active.
3	Battery Capacity Indicator	Blinking Green	The battery is full.
		Solid Green	The battery is at 20% to 99%.
		Solid Red	The battery is less than 20%
		Blinking Red	The battery is less than 5%.
4	Internet	Blue	5G service registered and connected to the Internet. Blinking means not connected to the Internet with a registered 5G service.
		Green	4G service registered and connected to the Internet. Blinking means not connected to the Internet with a registered 4G service.
		Orange	3G service registered and connected to the Internet. Blinking means not connected to the Internet with a registered 3G service.
		Red	Not connected to the Internet.
Note: If the LEDs dim, gently press the power button for approximately 1 second to display them again.			


Installation

This section will guide you through the installation process.

Initial Setup

1. Take note of the SSID (Wi-Fi name) and password printed on the label on the back cover. If you want to connect to the F518 wirelessly, you will need to enter this SSID and password.
2. To open the tray, insert the SIM ejector tool or a paperclip into the small hole beside it. Then, place the SIM card into the tray, making sure it is oriented correctly by aligning it with the notch in one corner.
3. Press and hold the power button (refer to **Hardware Overview** on **page 5**) for three seconds to turn on the device. Once the front LEDs illuminate, you may proceed with configuration.

Note: Always unplug and turn off the device before installing or removing the SIM card. Never insert or remove the SIM card while the device is in use.

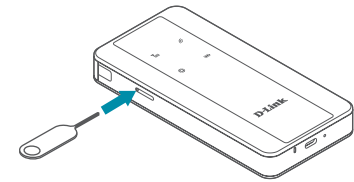

Wireless Installation Considerations

The F518 can be accessed using a wireless connection from anywhere within the operating range of its wireless network. Keep in mind that the quantity, thickness, and location of walls, ceilings, or other objects that the wireless signals must pass through may adversely affect wireless signals. Ranges vary depending on the types of materials and background RF (Radio Frequency) noise in your home or office. The key to maximizing the wireless range is to follow these basic guidelines:

1. Minimize the number of walls and ceilings between the hotspot and other network devices. Each wall or ceiling can reduce your adapter's range from 1 to 30 meters (3 to 90 feet).
2. Be aware of the direct line between network devices. A wall that is 0.5 meters (1.5 feet thick) appears to be almost 1 meter (3 feet) thick at a 45-degree angle. At a 2-degree angle it appears over 14 meters (42 feet) thick. Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Try to position access points, wireless routers, and computers so that the signal passes through open doorways. Materials such as glass, metal, brick, insulation, concrete, and water can affect wireless performance. Large objects such as fish tanks, mirrors, file cabinets, metal doors, and aluminum studs may also have a negative effect on range.
4. If you are using a 2.4 GHz cordless phone, make sure that the 2.4 GHz phone base is as far away from your wireless device as possible. The base transmits a signal even when the phone is not in use. In some cases, cordless phones, X-10 wireless devices, and electronic equipment such as ceiling fans, fluorescent lights, and home security systems may dramatically degrade wireless connectivity.

Configuration

This section will show you how to configure your new F518 using the web-based configuration that can be accessed via your web browser.

Initial Connection to the Hotspot

By default, the F518 comes configured to work with most 5G/4G SIM cards. Simply connect to it via Wi-Fi or use the included USB cable to access the Internet connection through your mobile data plan. If you wish to configure the hotspot, you will need to establish a direct connection with the router in order to access the web-based configuration. For more information, please refer to the below sections. Once you have configured your hotspot, you will be able to connect to the Internet using the Wi-Fi settings that you specified in the configuration process. Please ensure that the hotspot is powered on and has sufficient battery power before commencing the setup process.

Connect via USB


To connect to the hotspot via USB, plug the provided USB Type-C cable into the USB port on the bottom side of the device, and plug the other end into an available USB port on your computer.

Note: The USB hotspot connection is only supported on Windows.

Connect via Wi-Fi

Note: Please refer to the documentation that came with your operating system or wireless client for further information on how to connect to a wireless network.

To connect to F518 using Wi-Fi, open your operating system's wireless networking utility and scan for available networks to connect to. By default, the network name (SSID) of the F518 will be in the format **F518-xxxx**, where "**xxxx**" represents the last four characters of the F518's MAC address. The default SSID and password can also be found on the product label on the back cover.

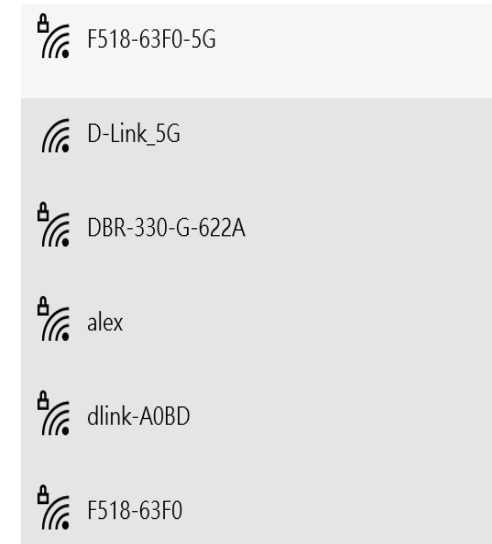


Once you have located your F518's wireless network, select it and click **Connect**.



You will then be prompted to enter the network security key for your device. Enter the security key in the box provided and click **OK**. Your wireless connection utility will confirm that the connection is successful, and you can move to the next step to continue to the configuration process.

You can also set up a connection using the Windows built-in WPS feature. Please see **Connect a Wireless Client to Your Network** on **page 47**.

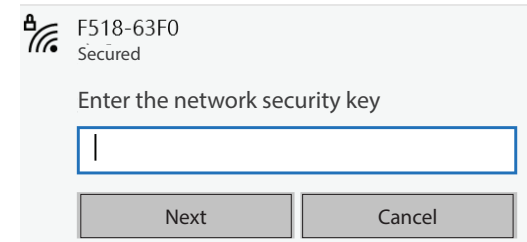


Web-based Configuration

To access the web-based configuration, open a web browser and enter the IP address of the hotspot, which is **192.168.125.1** by default in the address bar.




When your browser displays a security warning stating, “Your connection isn’t private.” You will also see Not Secure in the address bar, along with HTTPS crossed out with red lines. This is because the device’s default management URL is not an actual Internet website with valid certificates. You can proceed with the setup by following these steps:

1. Click the “Advanced” button.

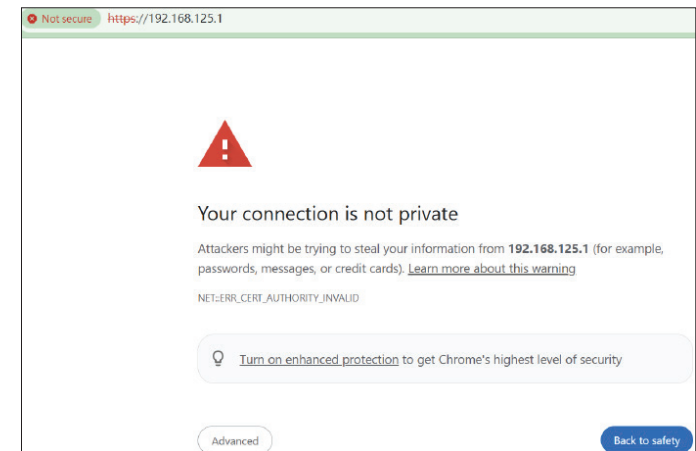


2. Click "Proceed to the ***https://192.168.125.1***".

Now you will be able to log in to your device.

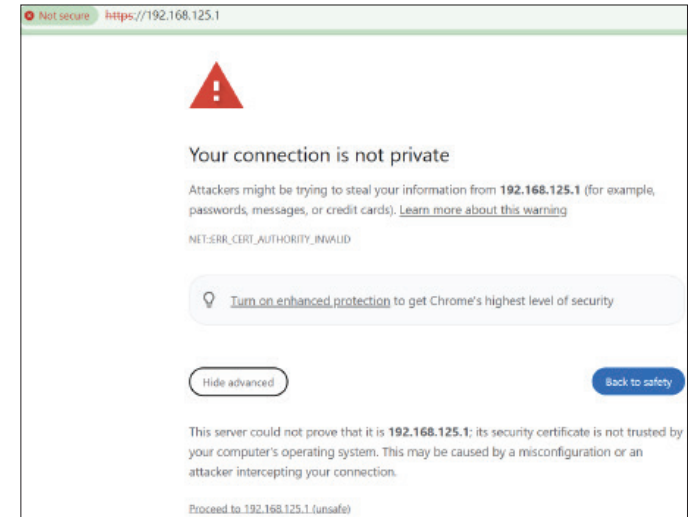

Once you have reached the web-based configuration using your web browser, you will need to log in. Enter the admin password printed on the product label on the back cover.

Click **Log In** to continue.

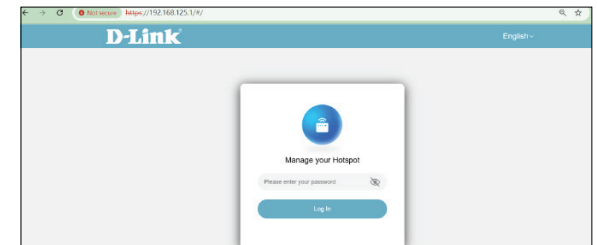

Home


The Home page displays the current status of the hotspot. There are three main sections: Internet, Traffic Statistics, the F518 device, Wi-Fi, Connected Devices. You can click each icon to go to the configuration page of the specific function. The menu bar at the top of the page will allow you to quickly navigate to the Network Settings, Wi-Fi Settings, Devices, Statistics, SMS, and Advanced functions. You may quickly jump back Home at any time.

Note: The system will automatically log out after a period of inactivity. To disable mobile data, click the **Disable Mobile Data** button.


The bottom of the Home page will display the following information:

APN	The Access Point Name (APN) of the mobile service.
Authentication	The authentication method for connecting with the mobile network.
IMEI	The International Mobile Equipment Identity is a unique number assigned to every mobile device.
Duration	The length of time that the device has been up and running
Upload Data	The uploaded data volume during the above specified period.
Download Data	The downloaded data volume during the above specified period.
Username	The network subscriber's account.
Password	The password of the account.
ICCID	The Integrated Circuit Card Identifier is a unique number assigned to each SIM card.

If a SIM card is not detected or there is no valid Internet service, the system will display *no service* and *SIM card not detected* as the current status of the Internet connectivity.

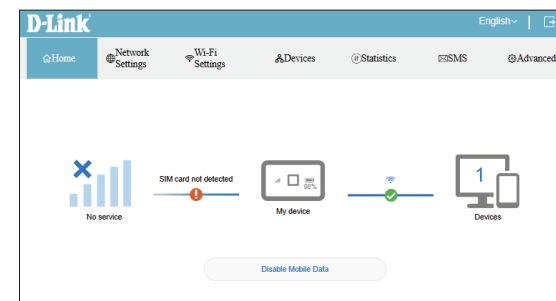

If the SIM card requires a PIN code, the system will display *Please enter SIM card PIN code* as the current status of the Internet connectivity. Refer to **PIN Code Management** on **page 44**.

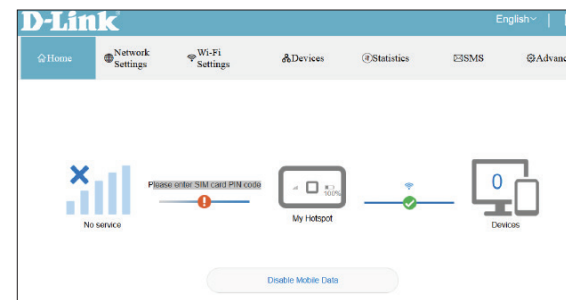

Network Settings

Internet Connection

The Internet page allows you to configure mobile connection parameters for Internet connection.

Configure your Internet connection according to the details of your mobile service plan	
Mobile data	Enable mobile data function. The default is enabled.
Data roaming	Enable or disable data roaming service when being outside your carrier's network. Service charges may apply depending on your service plan.
APN	Enter the Access Point Name (APN), which sets up a network connection to enable Internet access through cellular communication.
PDP type	Select IPv4 , IPv6 or both for APN IP addressing and roaming mechanism. The default is both.
Username/Password	Enter the Username and Password for mobile service authentication.
Authentication	Select the authentication method: None, CHAP, or PAP (default).
Network mode	Select the mobile standard used for your service: 5G , 4G , 3G or 5G/4G , 4G/3G , or 5G/4G/3G for maximized compatibility.
Turbo mode	Enable or disable the Turbo Mode to use LTE Max power to increase strength at the cost of more power consumption.
Click Save .	

The screenshot shows the 'Mobile Network' settings page. The 'Internet Connection' tab is selected. The page contains the following settings:

- Mobile data:** Toggled ON.
- Data roaming:** Toggled OFF.
- APN:** Set to 'Internet' (Access point name).
- PDP type:** Set to 'IPv4v6'.
- Username:** (Provided by the operator).
- Password:** (Provided by the operator).
- Authentication:** Radio buttons for CHAP, PAP, and NONE (selected).
- Network mode:** Set to '5G/4G/3G'.
- Turbo mode:** Toggled OFF (LTE Max power).


A 'Save' button is located at the bottom right of the settings area.

Mobile Network

The Mobile Network page allows you to configure advanced 5G connection parameters for Internet connection. Click **Save** after you have made changes.

Configure the following for 5G network:

Include	Enable 5G network
Network Mode	Specify the 5G network technology: SA+NSA, SA (Standalone), or NSA (Non-Standalone).

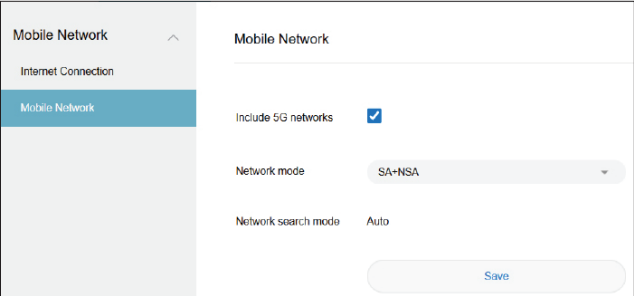

Wi-Fi Settings

You can configure your wireless LAN (WLAN) on this page for local devices to connect to the network wirelessly. To access this page, go to **Wi-Fi Setting**.

Configure the following for 2.4 GHz and 5 GHz Wi-Fi network:

Basic Settings

Wi-Fi 2.4 GHz


- Wi-Fi Status

Enable or disable the 2.4 GHz wireless network. The default is enabled.
- Wi-Fi Name (SSID)

Create a name for your wireless network.
- Security Mode

Select the appropriate security method: Open, WPA/WPA2, or WPA2/WPA3 (default).
- Wi-Fi Password

Create a password to use for wireless security. The password must be 10 to 32 characters long and include at least three of the following four character types:
 - Uppercase letters (A-Z)
 - Lowercase letters (a-z)
 - Numbers (0–9)
 - Special characters or symbols (e.g. + !)

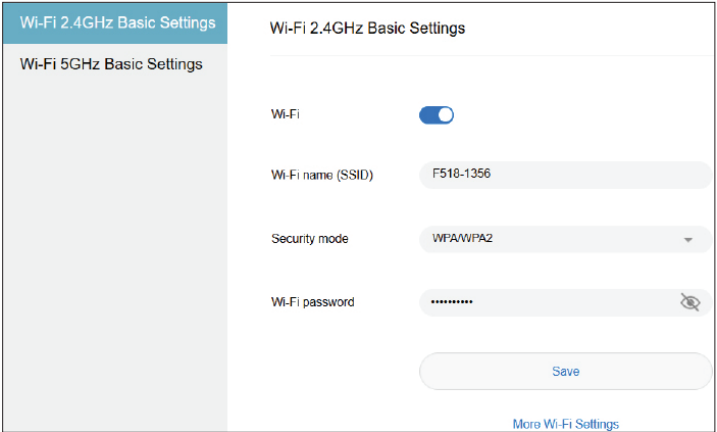

Wi-Fi 5 GHz

- Wi-Fi Status

Enable or disable the 5 GHz wireless network. The default is enabled.
- Wi-Fi Name (SSID)

Create a name for your wireless network.
- Security Mode

Select the appropriate security method: Open, WPA/WPA2, or WPA2/WPA3 (default).
- Wi-Fi Password

Create a password to use for wireless security. The password rule should conform with the selected security below. Refer to the following wireless security sections.

The password must be 10 to 32 characters long and include at least three of the following four character types:

 - Uppercase letters (A-Z)
 - Lowercase letters (a-z)
 - Numbers (0–9)
 - Special characters or symbols (e.g. + !)

Click **Save** after you are done with the above configuration.

Wi-Fi 2.4GHz Basic Settings

Wi-Fi 5GHz Basic Settings

Wi-Fi

☒

Wi-Fi name (SSID)

F518-1356-5G

Security mode

WPA/WPA2

Wi-Fi password

Save

More Wi-Fi Settings

2.4 GHz

- Bandwidth

Select bandwidth for the 2.4 GHz band: 20/40 MHz or 40 MHz
- Country code

Select the country of the device's location.

2.4GHz

Bandwidth

20/40MHz

2.4G country code

EU

Channel

Auto

Channel Select the channel number for wireless transmission: 1-13 or Auto (default).

5 GHz

Bandwidth Select bandwidth for the 5 GHz band: 20/40 MHz or 80 MHz

Country code Select the country of the device’s location.

Channel Select the channel number for wireless transmission: 36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, or 140, or Auto (default).

5GHz

Bandwidth

80MHz

5G country code

EU

Channel

Auto

Click **Save** after you have made changes on this page.

Wi-Fi MAC Filter

Configure the following to enable MAC Address Filter for 2.4 GHz or 5GHz, or both frequencies.

2.4 GHz/5 GHz

Filter Mode To configure a MAC filter:

Select either **Block** to block access or select **Allow** to allow access. An Allow list will allow only specified devices in the filter to access the Internet while all other devices will be blocked Internet access. Then click **Add** to add MAC addresses to the filter list.

2.4GHz Wi-Fi MAC Filter

Set the Wi-Fi MAC Filter to allow or block a device from connecting to Wi-Fi.

Filter mode

☒ Allow

☐ Block

Wi-Fi MAC Address List

+

No.	MAC address	Options
-----	-------------	---------

Save

Click **Save** after you have made changes on this page.

MAC address

MAC address format: XX XX.XX.XX.XX.XX

Cancel

OK

Wi-Fi WPS

The WPS (Wi-Fi Protected Setup) is an easy method to connect wireless clients to the device. Click **Add WPS Client** to display the WPS configuration page.

WPS Wi-Fi	Enable WPS connectivity on either 2.4 GHz Wi-Fi or 5 GHz Wi-Fi.
Enable WPS	Enable WPS to display the following WPS settings.
Push Button method	To use the Push Button method, click PBC Connect to start the WPS process (The Wi-Fi Indicator on the front cover will start to blink slowly). To pair with a client, please refer to the user manual of the wireless client. On Windows, after selecting the desired Wi-Fi network, click Push when prompted with the message: "You can also connect by pushing the button on the router."
PIN method	To use the PIN method, enter PIN and then click Connect . For PIN code, please refer to the user manual of the wireless client.

Note: Disabling the WPS will also disable the physical WPS button on the device.


Click **Save** after you have made changes on this page.

Devices

The Devices page displays the client information of the connected devices. It includes information such as device name, status, IP and MAC address, connected band, and duration.

Online/Offline Devices

Device Name	Click the pencil icon to edit the device name.
IP Address	The IP address of the connected device.
MAC Address	The physical address of the client.
Total Connection Time	The duration of the connection.
5 GHz	The frequency band used for the wireless connection.
On/off (available only to offline devices)	Switch the control to On: Permit the device to access the Internet. Switch the control to off: Block the device from accessing the Internet.

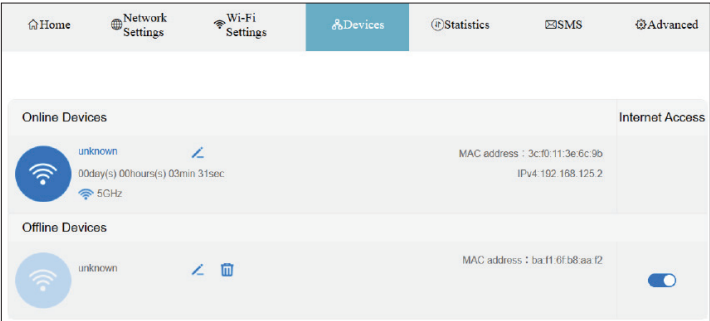

Statistics

The Statistics page displays data traffic. It also allows you to set monthly limit on data usage.

Mobile Network

Current data usage The amount of data consumed during the active connection session, as measured within the specified **Duration** below.

Total data usage The cumulative amount of data consumed within the specified **Duration** below.

Duration The time interval used to calculate data traffic.

Click **Clear History** to erase all data and restart usage calculation.

Click **Settings**  at the top right to enable monthly limit.

Set monthly package Enable or disable the monthly limit.

Start date Set the start day of the month: 1-31.

Monthly data plan Set the total number of allowed data usage and select the unit for data volume.

Threshold Set the threshold value (%) to disconnect the mobile service automatically when the threshold value is reached.

Automatically close net Enable this function to prevent extra charges when the set threshold is reached.

Click **Save**.

Home	Network Settings	Wi-Fi Settings	Devices	Statistics	SMS	Advanced
Statistics						
The data usage statistics shown here are approximate. For precise and up-to-date information, please refer to your mobile carrier.						
Mobile Network 						
Type	Current data usage		Total data usage			
Used	164M 253K 549Byte		220M 347K 229Byte			
Duration	00day(s) 01hours(s) 03min 48sec		01day(s) 05hours(s) 50min 02sec			

SMS

The SMS page allows you to manage SMS messages received and stored on the SIM card.

SMS Inbox

Unread SMS SMS messages that haven't been read.

Read SMS SMS messages that have been read.

Delete All Delete all messages.

New Messages

To write a new message, click + at the top right. Enter the recipient's phone number at the top, write the message in the text box, then click

Send ➤. The phone number should precede with a country code in this format: + *country code* if the message is to be sent to another country.

Click **Send**.

Home	Network Settings	Wi-Fi Settings	Devices	Statistics	SMS	Advanced
Statistics						
The data usage statistics shown here are approximate. For precise and up-to-date information, please refer to your mobile carrier.						
Mobile Network						
Type	Current data usage		Total data usage			
Used	164M 253K 549Byte		220M 347K 229Byte			
Duration	00day(s) 01hours(s) 03min 48sec		01day(s) 05hours(s) 50min 02sec			

Advanced

Wi-Fi Advanced

The Wi-Fi Advanced page allows you to configure advanced Wi-Fi settings. Refer to **Wi-Fi Settings** on **page 18** for basic settings of Wi-Fi.

Wi-Fi Advanced Settings

2.4 GHz

Bandwidth Select bandwidth for the 2.4 GHz band: 20/40 MHz or 40 MHz. Select 40 MHz if you are using a mix of 802.11n and above (802.11ax) devices. Select 20 MHz if you are using 802.11b/g devices only.

Country code Select the country of the device’s location.


Channel Select the channel number for wireless transmission. The default is auto.

5 GHz

Bandwidth Select bandwidth for the 5 GHz band: 20/40 MHz or 80 MHz. Select 80 MHz if you are using a mix of 802.11ac and above (802.11ax). Select 20/40 MHz if you are using a mix of 802.11n and below (802.11b/g) devices.

Country code Select the country of the device’s location.

Channel Select the channel number for wireless transmission. The default is auto.

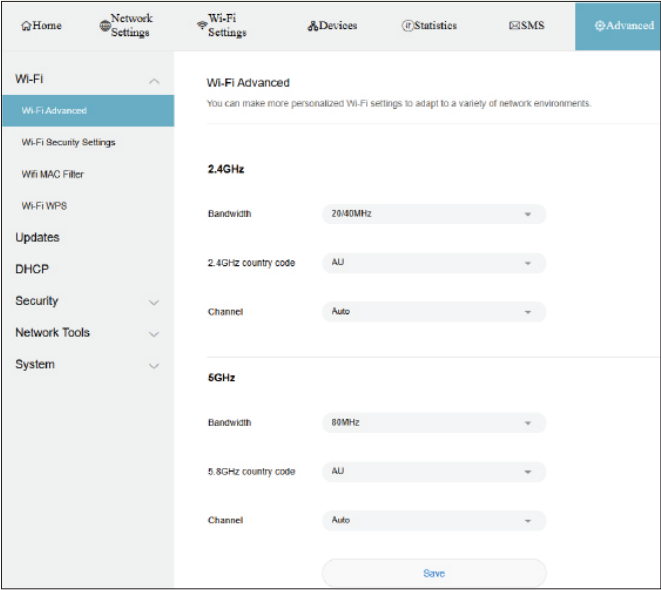

Wi-Fi Security Settings

Wi-Fi 2.4 GHz

- Wi-Fi Name (SSID)

Create a name for your wireless network.
- Security Mode

Select the appropriate security method: Open, WPA/WPA2, or WPA2/WPA3.
- Wi-Fi Password

Create a password to use for wireless security. The password must be 10 to 32 characters long and include at least three of the following four character types:

- Uppercase letters (A-Z)
 - Lowercase letters (a-z)
 - Numbers (0–9)
 - Special characters or symbols (e.g. + !)
- Hide Wi-Fi


Enable this option to not broadcast the Wi-Fi Name to clients and hide it from the scan list. Note that the WPS will also be disabled when Hide Wi-Fi is enabled.

Wi-Fi 5 GHz

- Wi-Fi Name (SSID)

Create a name for your wireless network.
- Security Mode

Select the appropriate security method: Open, WPA/WPA2, or WPA2/WPA3.

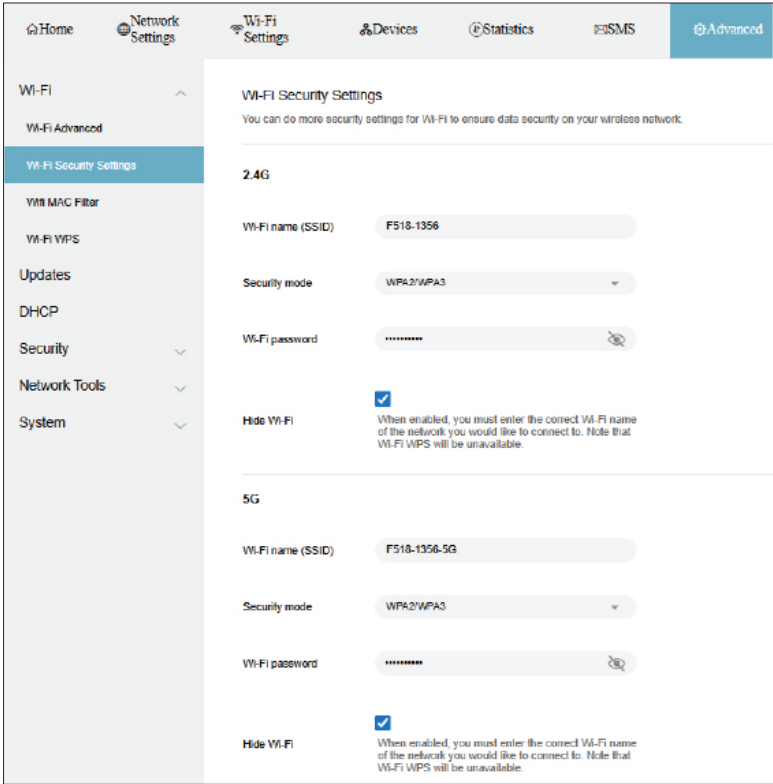

- Wi-Fi Password** Create a password to use for wireless security. The password must be 10 to 32 characters long and include at least three of the following four character types:
- Uppercase letters (A-Z)
 - Lowercase letters (a-z)
 - Numbers (0–9)
 - Special characters or symbols (e.g. + !)
- Hide Wi-Fi** Enable this option to not broadcast the Wi-Fi Name to clients and hide it from the scan list. Note that the WPS will also be disabled when Hide Wi-Fi is enabled.

Wi-Fi MAC Filter

The wireless MAC filters screen allows or blocks specified clients from accessing the Internet through the device.


2.4 GHz/5 GHz Wi-Fi MAC Filter

Filter mode Specify whether it is an *Allow* or a *Block* MAC address list on the specific band. An Allow list will allow only specified devices in the filter to access the Internet while all other devices will be blocked Internet access. A Block list will block the specified devices in the filter from accessing the Internet.

Click + to add MAC addresses (12 hexadecimal characters: 0-9, A-F) in pairs separated by colons (e.g., 00:1A:2B:3C:4D:5F) to the filter list. Then click **OK** to close the ADD MAC Address screen.

Click **Save**.

You can delete an entry to remove it from the list.

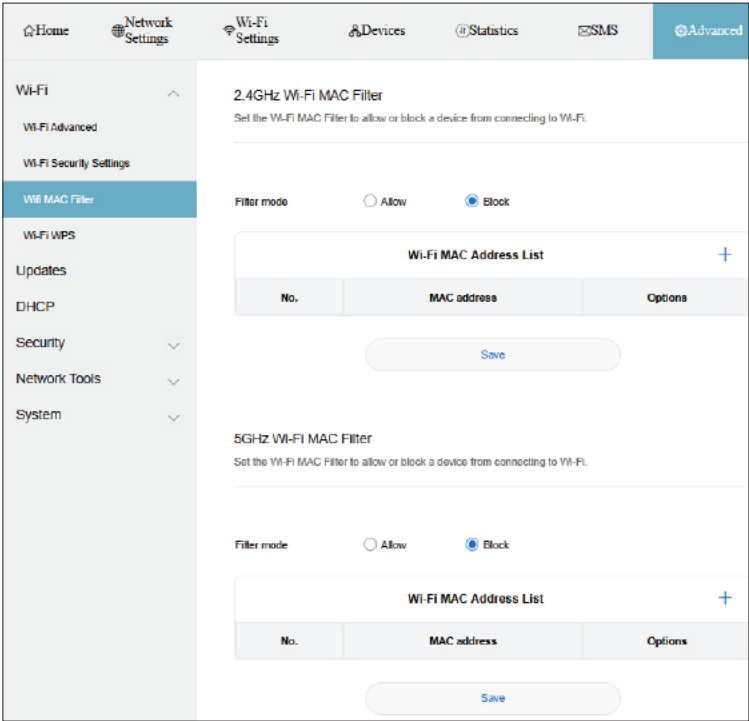

Wi-Fi WPS


The WPS (Wi-Fi Protected Setup) is an easy method to connect wireless clients to the device.

Wi-Fi WPS

WPS Wi-Fi	Enable WPS connectivity on either 2.4 GHz Wi-Fi or 5 GHz Wi-Fi.
Enable WPS	Enable WPS to display the following WPS settings.
Push Button method	To use the Push Button method, click PBC Connect to start the WPS process (The Wi-Fi Indicator on the front cover will start to blink slowly). To pair with a client, please refer to the user manual of the wireless client. On Windows, after selecting the desired Wi-Fi network, click Push when prompted with the message: "You can also connect by pushing the button on the router."
PIN method	To use the PIN method, enter PIN and then click Connect . For PIN code, please refer to the user manual of the wireless client.

Note: Disabling the WPS will also disable the physical WPS button on the device.

Click **Save** after you have made changes on this page.

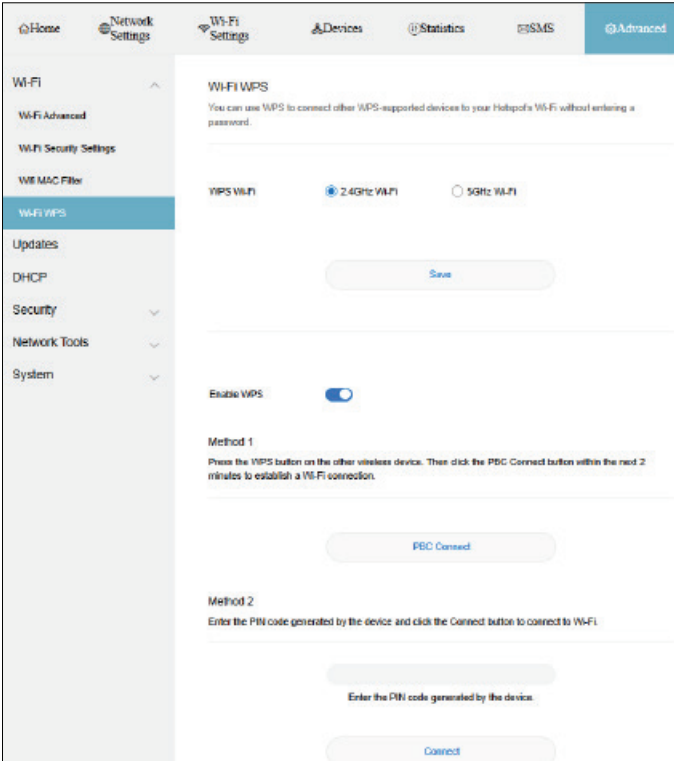

Updates

Keeping your Hotspot’s firmware up to date ensures optimal performance.


Note: Do not power off the router while the firmware is being uploaded; otherwise, errors will occur that may result in malfunction of the router and further RMA services may be required.

Automatic Upgrade

Click **Check** to check for new firmware release, then click **Upgrade** to start upgrading the device automatically.

Manual Upgrade

Click **Choose File** to locate the software file, then click **Upgrade** to start upgrading the device’s software.

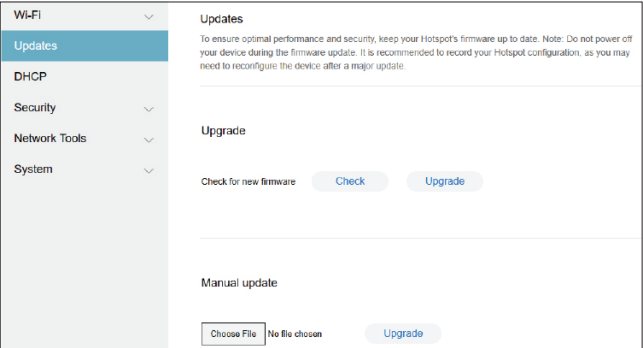

DHCP

The DHCP page lets you configure the DHCP service for your LAN.

You can configure detailed DHCP parameters.

DHCP Settings

- LAN IP address

Specify the LAN IP address of the device.
- DHCP IP range


Specify the DHCP server IP assignment range with **DHCP Start Address** and **End Address**: 192.168.125.x to 192.168.125.x.
- DHCP lease time

Enter the length of time for the IP address lease in hours for **DHCP Lease Time**. The default is 24 hours.
- Set DNS server manually

Enable the DNS setting of the DHCP assignment. Enter the **Primary DNS** and **Secondary DNS Server** of the DHCP assignment.

Note: Disabling the WPS will also disable the physical WPS button on the device.

Click **Save** after you have made changes on this page.

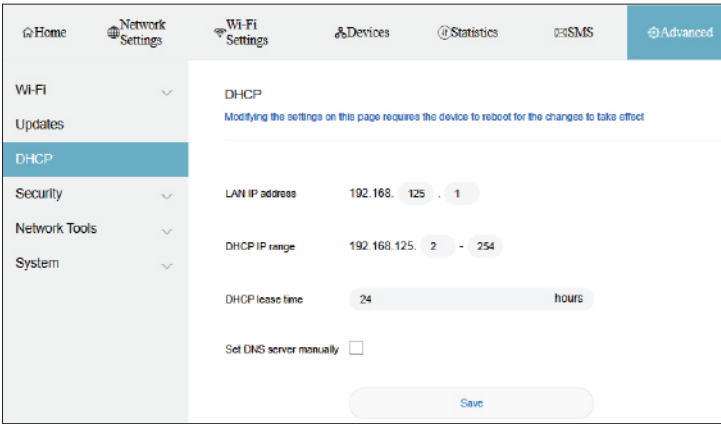

Security Firewall

The Firewall page offers advanced protection to safeguard your data against security threats and potential breaches.

You can configure custom firewall functions.

Firewall Settings

- Enable firewall

Turn on the firewall to access the following security features.
- Enable IP address filter


Block specific types of traffic from passing through the firewall.
- Disable WAN ping response

Prevent the device from responding to Ping requests from the WAN.
- Enable Website filter

Restrict access to unwanted or harmful websites.
- Enable DDoS protection

Denial of Service (DoS) protection prevents attacks utilizing spoofed packets to disrupt device services.

Click **Save** after you have made changes on this page.

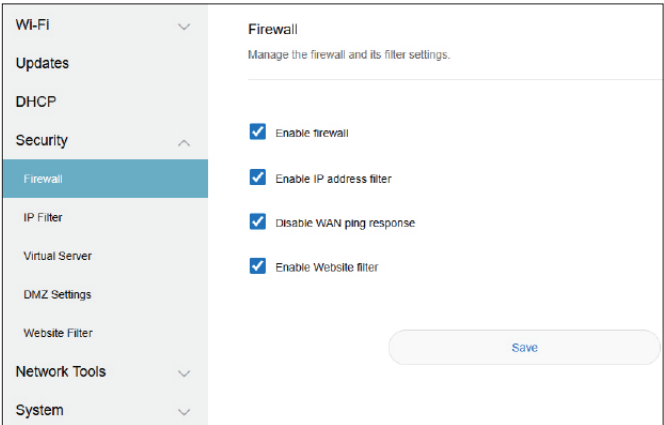

IP Filter

The IP Filter page allows you to configure rules to filter unwanted traffic.

You need to enable the “Enable IP Address Filter” option from the **Firewall** page first.

Configure the following for an IP filter rule:

Filter mode: Select either Black List or White List to deny or permit the following filtering list.

Click + to add a new rule and specify the following:

IP type Filter IPv4 or IPv6 traffic.

Protocol Select the network protocol for the traffic: TCP/UDP, TCP, UDP, or ICMP.


LAN IP Address Enter the LAN IP address (e.g. 1.1.1.1 for IPv4 or 2001::1 for IPv6) and LAN port that the rule will apply to. Both a single IP address and a range of IP addresses can be used. For IP address range, use “-” as the divider, for example, 1.1.1.1-1.1.1.5.

LAN Port Enter the LAN port used for this traffic flow. For port range, use “-” as the divider, for example, 23-25.

WAN IP Address Enter the WAN IP address (e.g. 2.2.2.2 for IPv4 or 2002::2 for IPv6) and WAN port that the rule will apply to. Both a single IP address and a range of IP addresses can be used. For IP address range, use “-” as the divider, for example, 2.2.2.2-2.2.2.5.

WAN Port Enter the WAN port used for this traffic flow. For port range, use “-” as the divider, for example, 23-25.

Click **OK** to close the screen.

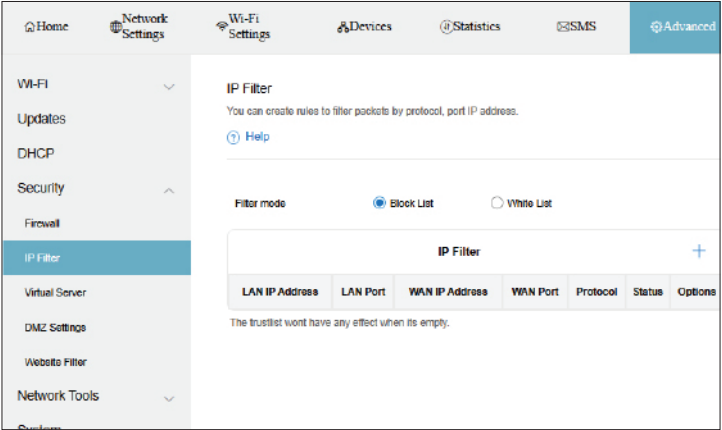


Virtual Server

The Virtual Server allows public access of certain applications hosted in the LAN.

Click **+** to add a new virtual server and specify the following:

- Protocol** Select the network protocol used for the service: TCP or UDP.
- WAN Port** Enter the WAN port used for this type of service.
- LAN IP Address** Enter the IP address of the computer on your local network that should receive the service requests.
- LAN Port** Enter the LAN port used for this type of service.

Click **OK** to close the screen.

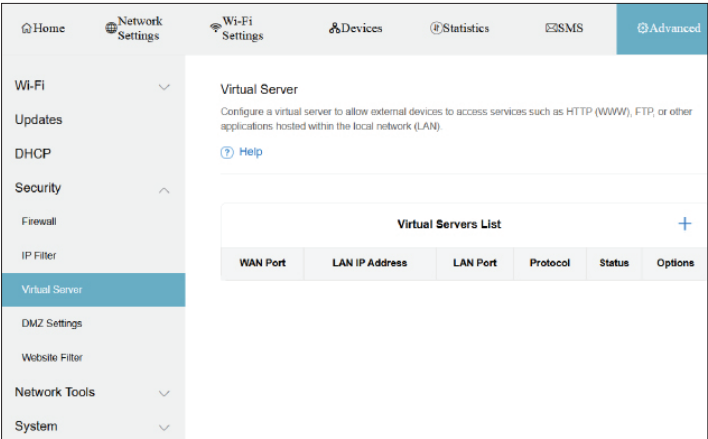


DMZ Settings

Devices in this zone are completely exposed to threats over the Internet. This is not recommended unless they are servers that must be exposed to the public network.

Configure the following for DMZ:

- DMZ status** Enable or disable Demilitarized Zone (DMZ).
- DMZ host IP address** After enabling DMZ, enter the IP address of the LAN host to be placed in this zone.

Click **Save**.

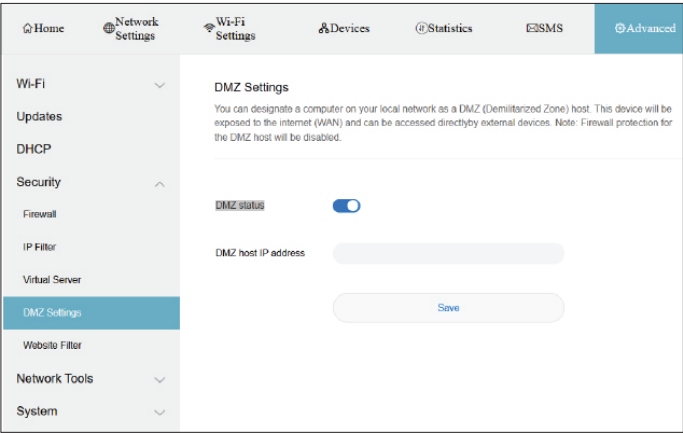

Website Filter

Website Filter restricts access to specified websites based on their web addresses. You need to enable the “Enable Website Filter” option from the **Firewall** page first.

Configure the following for a website filter rule:


Filter mode Select either Block List or White List to deny or permit the following filtering list. White List mode permits only specified websites and blocks all others.

Click + to add a website to the list.

Domain Name Enter the exact domain name of the website, for example, www.ABC.com. You can also enter a keyword to block websites based on the keywords with matching domain names. For example, use “ABC” to block “www.ABC.com” and “xxx.ABC.com” and other names containing ABC.

Click **Save**.

You can click Edit  to modify an entry or delete  to delete an entry.

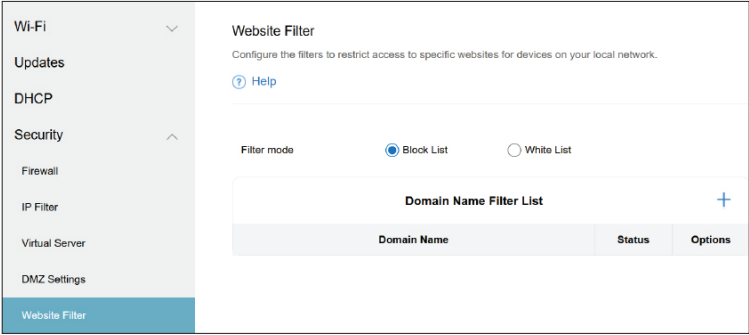

Network Tools

Ping

This page provides functions to test the router’s connection to another device in the Internet.

The Ping test verifies the availability of a destination host.

Enter the following for a Ping Test:

Number of packets Select the total number of ICMP packets (1-10) to be sent.

IP/Domain Enter the IP address or web address as the destination of the Ping request.

Click **Apply**.

The result will be shown in the below text box.

Wi-Fi

Updates

DHCP

Security

Network Tools

Ping

Traceroute

System

Ping

Number of packets

3

IP/Domain

Apply

Stop

Traceroute

The traceroute shows the route of data transferred to a destination host.

Enter the following for a Traceroute Test:

IP/Domain Enter the IP address or web address as the destination of the traceroute test.

Click **Apply**.

The result will be shown in the below text box.

Wi-Fi

Updates

DHCP

Security

Network Tools

Ping

Traceroute

Traceroute

IP/Domain

Apply


Stop

System Device Information

This page displays relevant hardware and software information of the device. It also shows signal strength information.

Device Information

Device name	Displays the model name.
IMEI	The International Mobile Equipment Identity, which is a unique number assigned to every mobile device.
Software Version	The device's current software version.
LAN MAC address	The physical address of the LAN interface.
WAN IP Address	The IPv4 address of the WAN interface.
WAN IPv6 Address	The IPv6 address of the WAN interface.
2.4G Wi-Fi maximum connection	The maximum number of client connections allowed for 2.4 GHz band.
5G Wi-Fi maximum connection	The maximum number of client connections allowed for 5 GHz band.
CELL_ID	A cell ID uniquely identifies a cell globally.
PCI	Physical Cell Identity (PCI), which identifies a cell in the local network.

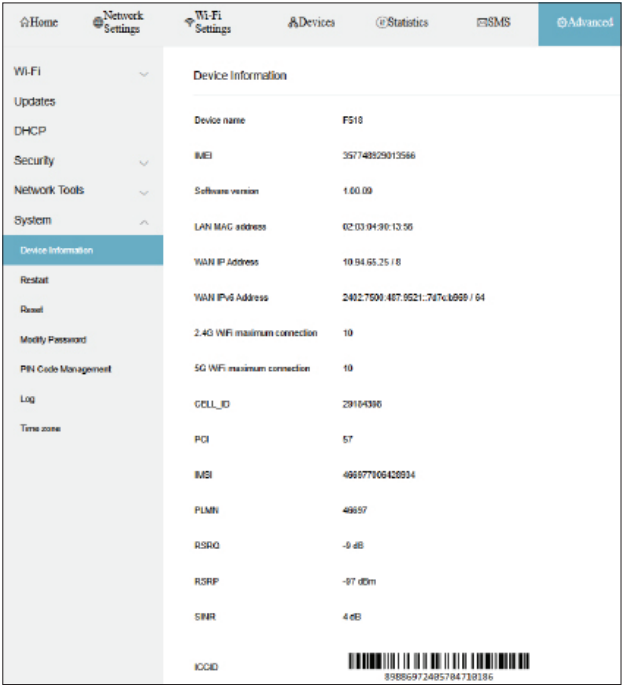


IMSI	The SIM/USIM/UICC card has a unique number called an International Mobile Subscriber Identity (IMSI). This is used to identify and authenticate users on cellular devices.
PLMN	Public Land Mobile Network contains both Mobile Country Code (MCC) and Mobile Network Code (MNC) that identify the country and operator.
RSRQ	Reference Signal Received Quality (RSRQ), which measures the signal level and quality for the LTE and 5G network.
RSRP	Reference Signal Received Power (RSRP), which measures the power level of the signal for the LTE and 5G network.
SINR	Signal-to-interference-plus-noise ratio, which measures the quality of wireless signal by taking account of noise and other interfering factors.
ICCID	The Integrate circuit card identity is a unique number assigned to each SIM card.

Restart

The Restart function allows you to reboot the device immediately.


Click **Restart**.

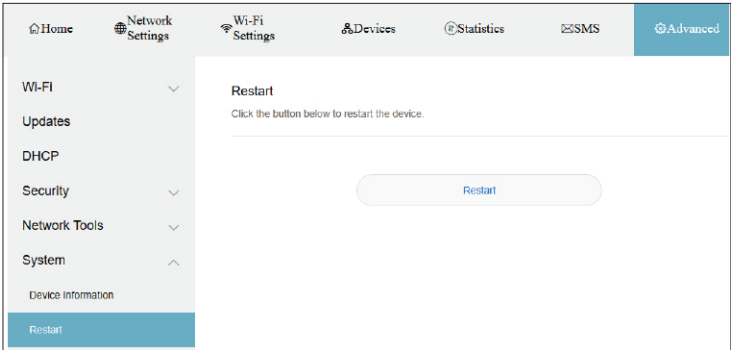

Reset

The Reset function allows you to reset the device to its factory default settings. It will restore all configuration settings back to the settings that were in effect at the time the device was shipped from the factory. Any settings after that time will be lost, including the device and Wi-Fi passwords that you have created.

Click **Reset**.

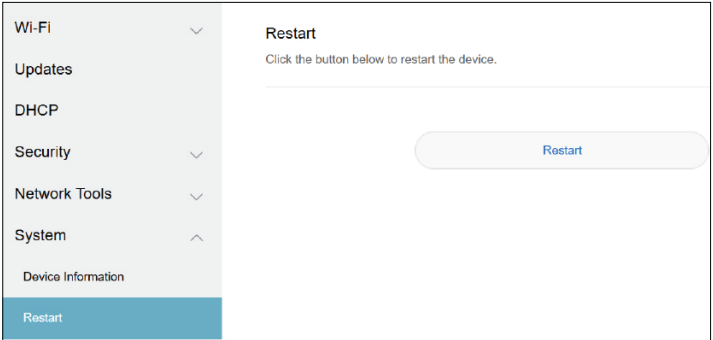

Modify Password

The page allows you to modify the admin password to protect against unauthorized access.

To change the current password:

Current password Enter the current password.

New password Create a password to use for wireless security. The password must be 10 to 32 characters long and include at least three of the following four character types:

- Uppercase letters (A-Z)
- Lowercase letters (a-z)
- Numbers (0–9)
- Special characters or symbols (e.g. + !)

Confirm password Enter the new password again.

Click **Save**.

PIN Code Management

The PIN (Personal Identification Number) Management allows you to enable or disable PIN and change PIN for SIM card security.

Enable PIN first and configure the following:

- PIN Code

Enter the correct PIN. The remaining number of attempts for entering the PIN will be displayed. By default, the system allows 3 PIN attempts before the SIM card becomes locked. If the SIM card is locked, you must enter the below PUK code.
- New PIN

Enter the new PIN if you would like to change the PIN.
- PUK Code

You must enter the correct PUK (Personal Unblocking Key) code to unlock the SIM. If you exceed 10 incorrect PUK attempts, the SIM card will be permanently disabled.

Click **Save**.

When you insert a SIM card protected by a PIN code, the system will require you to enter the code before connecting to the mobile network.

Wi-Fi

Updates

DHCP

Security

Network Tools

System

Device Information

Restart

Reset

Modify Password

PIN Code Management

Log

Time zone

PIN Code Management

Enable PIN

☒

PIN Code

.....

Remaining attempts: 0

Save

PUK code management

New PIN


PUK Code

Remaining attempts: 10

Log

The system maintains system operation logs for troubleshooting purposes.

Click **Download** to save a copy of the system log (.gz file) to your local download directory.

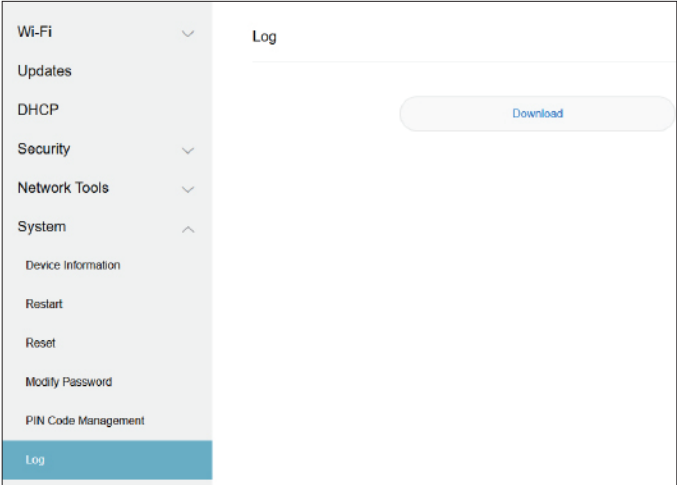

Time Zone

The Time Zone page allows you to configure, update, and maintain the correct time for the internal clock system. It allows you to set the time zone and the Network Time Protocol (NTP) server.

Enable PIN first and configure the following:

- Local current time** Displays the current date and time of the device.
- SNTP Server 1/2/3** Enter one of the following servers to synchronize the date and time for your device.
- Time Zone** Select your time zone from the drop-down menu.

Click **Save**.

Wi-Fi

Updates

DHCP

Security

Network Tools

System

Device Information

Restart

Reset

Modify Password

PIN Code Management

Log

Time zone

Time zone

Local current time

2025-08-13 14:39:04

SNTP Server 1

ntp.aliyun.com

SNTP Server 2

SNTP Server 3

Time zone

Asia/Shanghai


Save

Connect a Wireless Client to Your Network

WPS Button

The easiest way to connect your wireless devices to F518 is with WPS (Wi-Fi Protected Setup). Most wireless devices such as wireless adapters, media players, Blu-ray DVD players, wireless printers and cameras have a WPS button (or a software utility with WPS) that you can press to connect to the F518. Please refer to your user manual for the wireless device you want to connect to make sure you understand how to enable WPS. Once you know, follow the steps below:

Step 1 - Press the WPS button on your wireless device (or launch the software utility and start the WPS process).

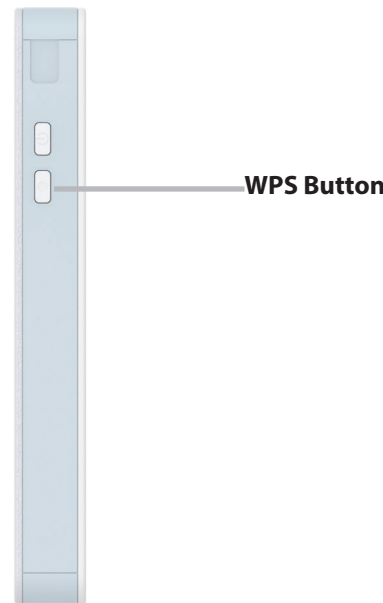

Step 2 - Within 2 minutes, press the WPS button on the F518. The Wi-Fi LED on the front panel will begin blinking blue slowly. You can also use the *PBC Connect* button on the configuration page.

Step 3 - Allow up to 1 minute for your connection to be configured. Once the Wi-Fi LED stops blinking, you will be connected using WPA2 encryption.

Battery Disassembly

Important:


1. Only qualified and authorized personnel are permitted to perform this procedure.
2. Work area must be equipped with Class D fire extinguisher or dry powder extinguisher.
3. Discarded batteries should be insulated and handed to licensed recycling agents.

The following tools will be required:

1. Anti-static gloves and wrist strap (ESD protection)
2. Precision screwdriver set (Phillips / flathead)
3. Unfolded paperclip
4. Flat spudger (prying tool)


Remove the SIM card tray:

To take out the tray, insert the SIM ejector tool or a paperclip into the small hole beside it.





Remove the front cover:

1. Use a spudger to gently pry open one corner of the front cover and push upwards along the seam to pry open case latches.
2. Once all the latches are pried open, the front cover can be removed.

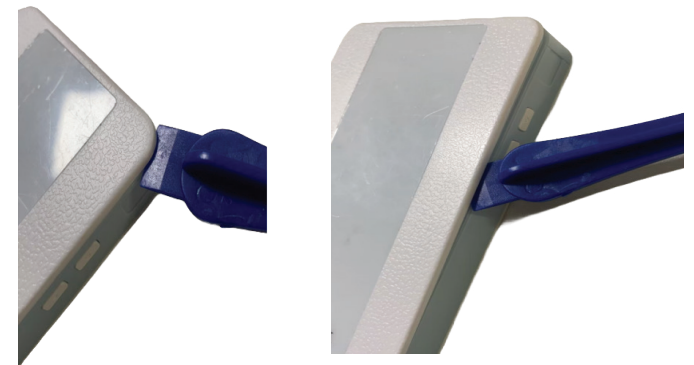

Remove the back cover:

1. Use a screwdriver to uninstall the 4 screws on the corners.
2. Use the spudger to pry open one corner of the back cover and push upwards along the seam to pry open case latches.
3. Once all the latches are pried open, the back cover can be lifted and removed.

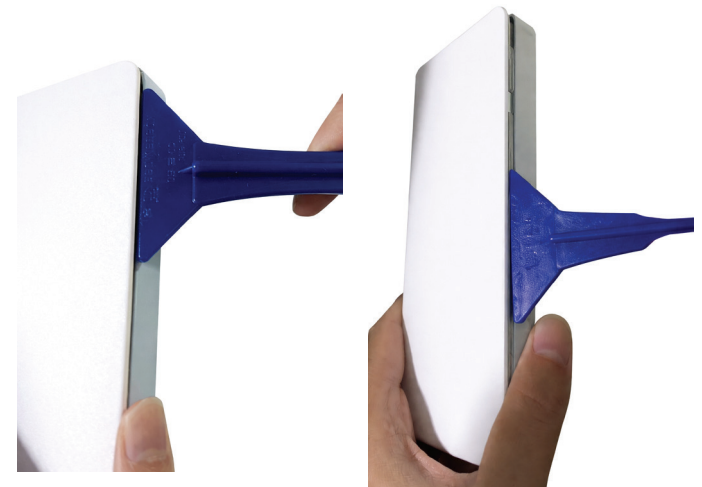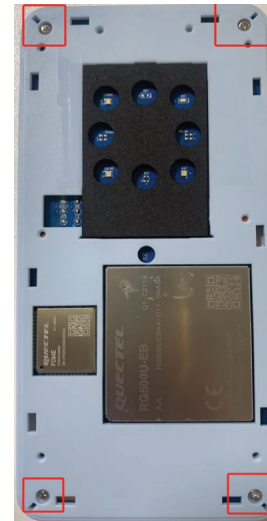


Note: To prevent damage to the latches, gently release them.

Remove the body frame:

1. Gently press down on the foam with your hand to push the body frame out slightly.





2. Gently pry open the two locking latches.
3. Repeat the above step on the other side and the body frame can be released.

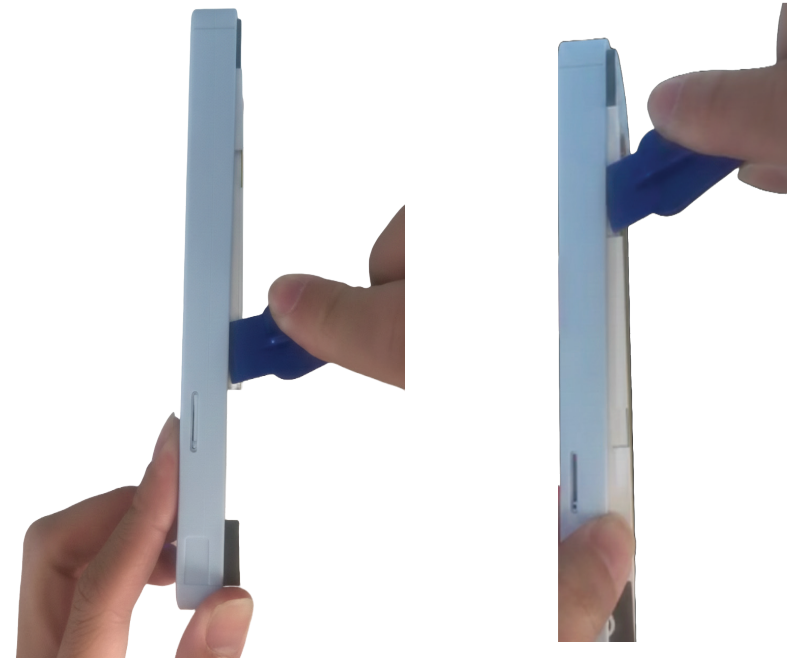

Remove the battery:

1. Remove the box connector on the PCB.
2. Remove the 4 screws on the corner.
3. Lift up the board to unlock the two latches.
4. Release the rest of the latches to separate the battery from the PCB.

Note: To prevent a short circuit, cover both ends of the battery (the positive and negative terminals) with tape.

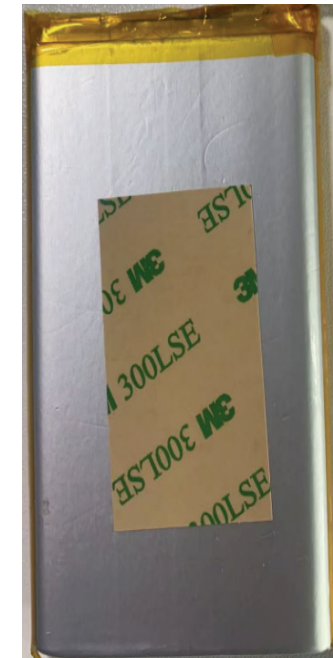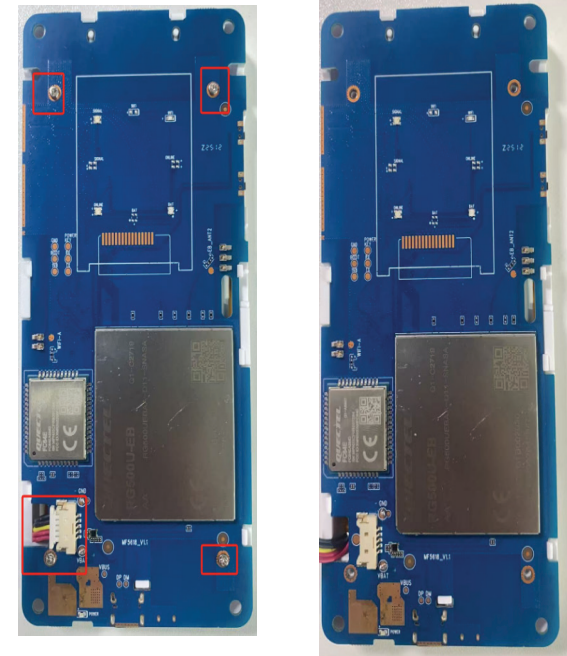

Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the F518. Read the following descriptions if you are having problems.

1. Why can't I access the web-based configuration?

When entering the IP address of your hotspot (192.168.125.1 for example), you are not connecting to a website on the Internet nor do you have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based configuration.

- Make sure you have an updated Java-enabled web browser. We recommend the following:
 - Microsoft® Edge, Google™ Chrome 28.0, Mozilla® Firefox 28, or Apple® Safari 6.
- If attempting to connect wirelessly, ensure that the Wi-Fi indicator on the LED display is lit. Also, ensure that you are connected to the correct SSID for your mobile hotspot.
- Make sure that the computer you are using is not connected to any other devices (such as routers or switches) which might have the same IP address as the F518, as this may cause an IP address conflict. If you have a conflict, temporarily unplug any other devices from your computer while you configure the F518. You can also change the IP address of the F518 in the DHCP configuration tab of the Advanced menu. You may also need to renew your computer's IP address configuration. To do this, start the Command utility: Click on **Start** and type **cmd** in the search box, then press **Enter**. This will bring up a black screen with white text. At the command prompt, type **ipconfig /release** and wait for the process to be completed. Next, type **ipconfig /renew** which will renew your computer's IP address configuration.
- Disable any Internet security software running on the computer. Software firewalls such as ZoneAlarm, BlackICE, Sygate, Norton Personal Firewall, and Windows® XP firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

2. What can I do if I forget my password?

If you forget your password, you must reset your hotspot. Please note that this process will change all your settings back to the factory defaults. To reset the hotspot, press and hold the Power and WPS button simultaneously for 10 seconds (refer to **Hardware Overview** on **page 5**). The F518 will restore the factory default settings. The default IP address is 192.168.125.1, and the default admin password is printed on the product label.

Networking Basics


Check your IP address

After you install your new D-Link adapter, by default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless router) automatically. To verify your IP address, please follow the steps below.

Click on **Start** and type *cmd* in the search box, then press **Enter**.

At the prompt, type *ipconfig* and press **Enter**.

This will display the IP address, subnet mask, and the default gateway of your adapter.

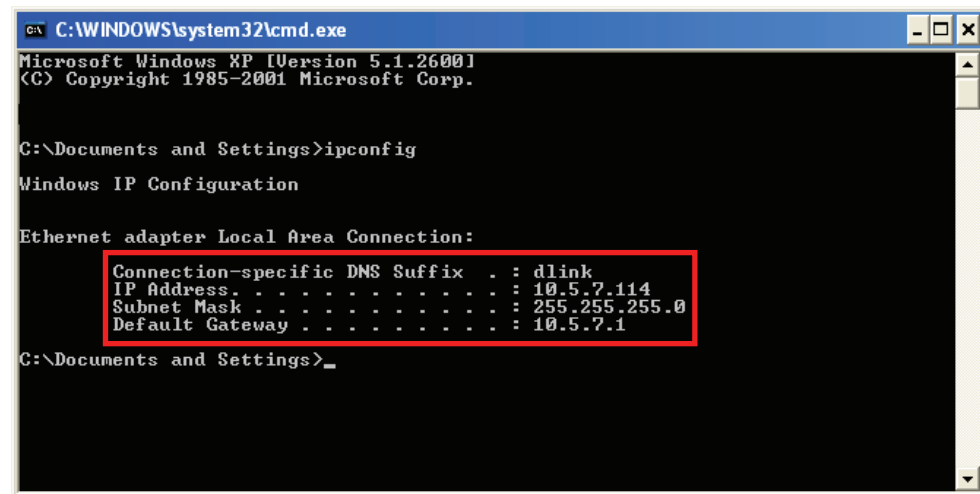

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : dlink
    IP Address. . . . . : 10.5.7.114
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 10.5.7.1

C:\Documents and Settings>_
```

If the address is 0.0.0.0 or 169.254.x.x check your adapter installation, security settings, and the settings on your hotspot. Some firewall software programs may block a DHCP request on newly installed adapters.

Statically Assign an IP address

1. If you are not using a DHCP capable gateway/router, or you need to assign a static IP address, please follow the steps below:

- Windows® 11/10** Start> Settings > Network & Internet.
Windows® 7 /8 Start > Control Panel > Network and Internet > Network and Sharing Center
Windows® XP Start > Control Panel > Network Connections

2. Select **Wi-Fi > Manage known networks**. For Windows 7/8/XP, click **Change adapter settings**. Choose the network you want to modify, right-click on it, then select **Properties**.

3. Under **IP assignment**, select **Edit**. For Windows 7/8/XP, Select the **Networking** tab. Under **This connection uses the following items**, select **Internet Protocol Version 4 (TCP/IPv4)** or **Internet Protocol Version 6 (TCP/IPv6)**. Then select **Use the Following IP Address**.

4. Under **Edit network IP settings** or **Edit IP settings**, select **Manual**. If IPv4 is selected, type the IP address settings in **IP address**, **Subnet prefix length** (subnet mask), and **Gateway** fields. If IPv6 is selected, type the IP address settings in **IP address**, **Subnet prefix length**, and **Gateway** fields. The prefix-length in IPv6 has the same function as the subnet mask in IPv4: determine the subnetwork. However, it is expressed as an integer between 1 through 128 as opposed to four octets in IPv4.

Example: Enter x.x.x.x for IPv4 addressing scheme (where x is between 0 and 255)

and xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx for IPv6 addressing scheme (where x is a hexadecimal digit).

Set Preferred DNS the same as the LAN IP address of your hotspot.

The Alternate DNS is only optional or you may enter a DNS server from your ISP.

5. When you're done, click **Save**.

Edit IP settings

Manual

IPv4

On

IP address

10.1.2.222

Subnet prefix length

24

Gateway

10.1.2.1

Preferred DNS

Alternate DNS

Technical Specifications

Radio Frequency Bands¹

- 5G NR NSA: n1/n3/n7/n20/n28/n38/n40/n41/n77/n78
- 5G NR SA: n1/n3/n5/n7/n8/n20/n28/n38/n40/n41/n66/n77/n78
- LTE-FDD: B1/B2/B3/B4/B5/B7/B8/B20/B28/B66
- LTE-TDD: B38/B40/B41
- WCDMA: B1/B2/B5/B8

Cellular Access²

NR SA Mode:

- Downlink: 2 Gbps
- Uplink: 1 Gbps

NR NSA Mode:

- Downlink: 2.6 Gbps
- Uplink: 650 Mbps

LTE Mode:

- Downlink: 600 Mbps
- Uplink: 150 Mbps

Wi-Fi Access Point

- IEEE 802.11ax/ac/n (5 GHz)
- IEEE 802.11ax/n/g/b (2.4 GHz)

Antenna

- 4 x Internal Cellular Antennas
- 2 x Wi-Fi 2.4/5 GHz Wi-Fi Internal Antennas

USB Interface

- 1 x USB Type-C with USB Power Delivery (PD 3.0)

for both power input and output

SIM/UICC Slot

- Nano SIM card slot (4FF)

¹ Supported frequency band is dependent upon regional hardware version.

² Data rates are theoretical. Data transfer rate depends on network capacity, signal strength, and other factors.

Indicators

LED Indicators:

- Internet
- 4G/5G Signal Strength
- Wi-Fi
- Battery Capacity
- Battery Charging Status

Wireless Encryption

- WPA™
- WPA2
- WPA3
- Wi-Fi Protected Setup (WPS)

Firewall

- Virtual Server
- IP Address/Domain Name Filtering
- DMZ

Dimensions (L x W x H)

- 147 x 72 x 15 mm (5.79 x 2.83 x 0.59 in)

Weight

- 274 g (9.67 oz)

Operating Temperature

- -10 to 40 °C (14 to 104 °F)

Storage Temperature

- -40 to 70 °C (-40 to 158 °F)

Regulatory Information

CE EMI Class A Warning

This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.



	Frequency Band(s) Frequenzband Fréquence bande(s) Bandas de Frecuencia Frequenza/e Frequentie(s)	Max. Output Power (EIRP) Max. Output Power Consommation d'énergie max. Potencia máxima de Salida Potenza max. Output Max. Output Power
5 G	5.15 – 5.25 GHz	200 mW
	5.25 – 5.35 GHz	200 mW
	5.47 – 5.725 GHz	1 W
2.4 G	2.4 – 2.4835 GHz	100 mW

FCC Regulations:

This mobile router complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile router has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Note:

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Information (SAR)

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

During SAR testing, this device is set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage near the body. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.

For this device, the highest reported SAR value for usage near the body is 1.099 W/kg.

SAR compliance for body operation is based on a separation distance of 5 mm between the unit and the human body to ensure RF exposure level compliant or lower to the reported level.

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

European Community Declaration of Conformity:

Česky [Czech]	Tímto D-Link Corporation prohlašuje, že tento produkt, jeho příslušenství a software jsou v souladu se směrnicí 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). Celý text ES prohlášení o shodě vydaného EU a o firmwaru produktu lze stáhnout na stránkách k produktu www.dlink.com .
Dansk [Danish]	D-Link Corporation erklærer herved, at dette produkt, tilbehør og software er i overensstemmelse med direktiv 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). Den fulde tekst i EU-overensstemmelseserklæringen og produktfirmware kan wnloades fra produktsiden hos www.dlink.com .
Deutsch [German]	Hiermit erklärt die D-Link Corporation, dass dieses Produkt, das Zubehör und die Software der Richtlinie 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery) and 2011/65/EU & (EU)2015/863 (RoHS) entsprechen. Der vollständige Text der Konformitätserklärung der Europäischen Gemeinschaft sowie die Firmware zum Produkt stehen Ihnen zum Herunterladen von der Produktseite im Internet auf www.dlink.com zur Verfügung.
Eesti [Estonian]	Käesolevaga kinnitab D-Link Corporation, et see toode, tarvikud ja tarkvara on kooskõlas direktiiviga 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). Euroopa Liidu vastavusdeklaratsiooni täistekst ja toote püsivara on allalaadimiseks saadaval tootelehel www.dlink.com .
English	Hereby, D-Link Corporation, declares that this product, accessories, and software are in compliance with directive 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery) and 2011/65/EU & (EU)2015/863 (RoHS). The full text of the EU Declaration of Conformity and product firmware are available for download from the product page at www.dlink.com
Español [Spanish]	Por la presente, D-Link Corporation declara que este producto, accesorios y software cumplen con las directivas 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). El texto completo de la declaración de conformidad de la UE y el firmware del producto están disponibles y se pueden descargar desde la página del producto en www.dlink.com .
Ελληνική [Greek]	Με την παρούσα, η D-Link Corporation δηλώνει ότι αυτό το προϊόν, τα αξεσουάρ και το λογισμικό συμμορφώνονται με την Οδηγία 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). Το πλήρες κείμενο της δήλωσης συμμόρφωσης της ΕΕ και το υλικολογισμικό του προϊόντος είναι διαθέσιμα για λήψη από τη σελίδα του προϊόντος στην τοποθεσία www.dlink.com .

Français [French]	Par les présentes, D-Link Corporation déclare que ce produit, ces accessoires et ce logiciel sont conformes aux directives 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). Le texte complet de la déclaration de conformité de l'UE et le microprogramme du produit sont disponibles au téléchargement sur la page des produits à www.dlink.com .
Italiano [Italian]	Con la presente, D-Link Corporation dichiara che questo prodotto, i relativi accessori e il software sono conformi alla direttiva 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). Il testo completo della dichiarazione di conformità UE e il firmware del prodotto sono disponibili per il download dalla pagina del prodotto su www.dlink.com .
Latviski [Latvian]	Ar šo uzņēmums D-Link Corporation apliecina, ka šis produkts, piederumi un programmatūra atbilst direktīvai 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). ES atbilstības deklarācijas pilno tekstu un produkta aparātprogrammatūru var lejupielādēt attiecīgā produkta lapā vietnē www.dlink.com .
Lietuvių [Lithuanian]	Šiuo dokumentu „D-Link Corporation“ pareiškia, kad šis gaminys, priedai ir programinė įranga atitinka direktyvą 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). Visą ES atitikties deklaracijos tekstą ir gaminio programinę aparatinę įrangą galima atsisiųsti iš gaminio puslapio adresu www.dlink.com .
Nederlands [Dutch]	Hierbij verklaart D-Link Corporation dat dit product, accessoires en software voldoen aan de richtlijnen 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). De volledige tekst van de EU conformiteitsverklaring en productfirmware is beschikbaar voor download van de productpagina op www.dlink.com .
Malti [Maltese]	Bil-preżenti, D-Link Corporation tiddikjara li dan il-prodott, l-aċċessorji, u s-software huma konformi mad-Direttiva 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). Tista' tnizzel it-test sħiħ tad-dikjarazzjoni ta' konformità tal-UE u l-firmware tal-prodott mill-paġna tal-prodott fuq www.dlink.com .
Magyar [Hungarian]	Ezennel a D-Link Corporation kijelenti, hogy a jelen termék, annak tartozékai és szoftvere megfelelnek a 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). sz. rendeletnek rendelkezéseinek. Az EU Megfelelőségi nyilatkozat teljes szövege és a termék firmware a termék oldaláról tölthető le a www.dlink.com címen.
Polski [Polish]	D-Link Corporation niniejszym oświadcza, że ten produkt, akcesoria oraz oprogramowanie są zgodne z dyrektywami 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). Pełen tekst deklaracji zgodności UE oraz oprogramowanie sprzętowe do produktu można pobrać na stronie produktu w witrynie www.dlink.com .

Português [Portuguese]	Desta forma, a D-Link Corporation declara que este produto, os acessórios e o software estão em conformidade com a diretiva 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). O texto completo da declaração de conformidade da UE e do firmware
Slovensko[Slovenian]	Podjetje D-Link Corporation s tem izjavlja, da so ta izdelki, dodatna oprema in programska oprema skladni z direktivami 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). Celotno besedilo izjave o skladnosti EU in vdelana programska oprema sta na voljo za prenos na strani izdelka na www.dlink.com .
Slovensky [Slovak]	Spoločnosť D-Link týmto vyhlasuje, že tento produkt, príslušenstvo a softvér sú v súlade so smernicou 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). Úplné znenie vyhlásenia EÚ o zhode a firmvéri produktu sú k dispozícii na prevzatie zo stránky produktu www.dlink.com .
Suomi [Finnish]	D-Link Corporation täten vakuuttaa, että tämä tuote, lisävarusteet ja ohjelmisto ovat direktiivin 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS) vaatimusten mukaisia. Täydellinen EU-vaatimustenmukaisuusvakuutus samoin kuin tuotteen laiteohjelmisto ovat ladattavissa osoitteesta www.dlink.com .
Svenska[Swedish]	D-Link Corporation försäkrar härmed att denna produkt, tillbehör och programvara överensstämmer med direktiv 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). Hela texten med EU-försäkran om överensstämmelse och produkt-firmware kan hämtas från produktsidan på www.dlink.com .
Íslenska [Icelandic]	Hér með lýsir D-Link Corporation því yfir að þessi vara, fylgihlutir og hugbúnaður eru í samræmi við tilskipun 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). Sækja má ESB-samræmisýfirlýsinguna í heild sinni og fastbúnað vörunnar af vefsíðu vörunnar á www.dlink.com .
Norsk [Norwegian]	Herved erklærer D-Link Corporation at dette produktet, tilbehøret og programvaren er i samsvar med direktivet 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery), 2011/65/EU & (EU)2015/863 (RoHS). Den fullstendige teksten i EU-erklæring om samsvar og produktets fastvare er tilgjengelig for nedlasting fra produktsiden på www.dlink.com .

Warning Statement:

The power outlet should be near the device and easily accessible.

NOTICE OF WIRELESS RADIO LAN USAGE IN THE EUROPEAN COMMUNITY (FOR WIRELESS PRODUCT ONLY):

- This device is a 2.4 GHz wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries. This equipment may be operated in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, and CY.

Usage Notes:

- To remain in conformance with European National spectrum usage regulations, frequency and channel limitations will be applied on the products according to the country where the equipment will be deployed.
- Please refer to the product manual or datasheet to check whether your product uses 2.4 GHz and/or 5 GHz wireless.

HINWEIS ZUR VERWENDUNG VON DRAHTLOS-NETZWERK (WLAN) IN DER EUROPÄISCHEN GEMEINSCHAFT (NUR FÜR EIN DRAHTLOSES PRODUKT)

- Bei diesem Gerät handelt es sich um ein zum Einsatz in allen EU-Mitgliedsstaaten und in EFTA-Ländern - ausgenommen Frankreich. Der Betrieb dieses Geräts ist in den folgenden Ländern erlaubt: AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Gebrauchshinweise:

- Um den in Europa geltenden nationalen Vorschriften zum Nutzen des Funkspektrums weiterhin zu entsprechen, werden Frequenz und Kanalbeschränkungen, dem jeweiligen Land, in dem das Gerät zum Einsatz kommt, entsprechend, auf die Produkte angewandt.
- Bitte schlagen Sie im Handbuch oder Datenblatt nach nach, ob Ihr Gerät eine 2,4 GHz und / oder 5 GHz Verbindung nutzt.

AVIS CONCERNANT L'UTILISATION DE LA RADIO SANS FIL LAN DANS LA COMMUNAUTÉ EUROPÉENNE (UNIQUEMENT POUR LES PRODUITS SANS FIL)

- Cet appareil est un système de transmission à large bande (émetteur-récepteur) de 2,4 GHz, destiné à être utilisé dans tous les États-membres de l'UE et les pays de l'AELE. Cet équipement peut être utilisé dans les pays suivants : AL, AD, BE , BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT , MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Notes d'utilisation:

- Pour rester en conformité avec la réglementation nationale européenne en matière d'utilisation du spectre, des limites de fréquence et de canal seront appliquées aux produits selon le pays où l'équipement sera déployé.
- Merci de vous référer au guide d'utilisation ou de la fiche technique afin de vérifier si votre produit utilise 2.4 GHz et/ou 5 GHz sans fil.

AVISO DE USO DE LA LAN DE RADIO INALÁMBRICA EN LA COMUNIDAD EUROPEA (SOLO PARA EL PRODUCTO INALÁMBRICO)

- Este dispositivo es un sistema de transmisión (transceptor) de banda ancha de 2,4 GHz, pensado para su uso en todos los estados miembros de la UE y en los países de la AELC. Este equipo se puede utilizar en AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Notas de uso:

- Para seguir cumpliendo las normas europeas de uso del espectro nacional, se aplicarán limitaciones de frecuencia y canal en los productos en función del país en el que se pondrá en funcionamiento el equipo.
- Por favor compruebe el manual o la ficha de producto para comprobar si el producto utiliza las bandas inalámbricas de 2.4 GHz y/o la de 5 GHz.

AVVISO PER L'USO DI LAN RADIO WIRELESS NELLA COMUNITÀ EUROPEA (SOLO PER PRODOTTI WIRELESS)

- Questo dispositivo può essere utilizzato in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Note per l'uso

- Al fine di mantenere la conformità alle normative nazionali europee per l'uso dello spettro di frequenze, saranno applicate limitazioni sulle frequenze e sui canali per il prodotto in conformità alle normative del paese in cui il dispositivo viene utilizzato.
- Ti invitiamo a fare riferimento al manuale del prodotto o alla scheda tecnica per verificare se il tuo prodotto utilizza le frequenze 2,4 GHz e/o 5 GHz.

KENNISGEVING VAN DRAADLOOS RADIO LAN-GEBRUIK IN DE EUROPESE GEMEENSCHAP (ALLEEN VOOR DRAADLOOS PRODUCT)

- Dit toestel is een 2.4 GHz breedband transmissiesysteem (transceiver) dat bedoeld is voor gebruik in alle EU lidstaten en EFTA landen. Deze uitrusting mag gebruikt worden in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Gebruiksaanwijzingen:

- Om de gebruiksvoorschriften van het Europese Nationale spectrum na te leven, zullen frequentie- en kanaalbeperkingen worden toegepast op de producten volgens het land waar de uitrusting gebruikt zal worden.
- Raadpleeg de handleiding of de datasheet om te controleren of uw product gebruik maakt van 2.4 GHz en/of 5 GHz.

SAFETY INSTRUCTIONS

The following general safety guidelines are provided to help ensure your own personal safety and protect your product from potential damage. Remember to consult the product user instructions for more details.

- Static electricity can be harmful to electronic components. Discharge static electricity from your body (i.e. touching grounded bare metal) before touching the product.
- Do not attempt to service the product and never disassemble the product. For some products with a user replaceable battery, please read and follow the instructions in the user manual.
- Do not spill food or liquid on your product and never push any objects into the openings of your product.
- Do not use this product near water, areas with high humidity, or condensation unless the product is specifically rated for outdoor application.
- Keep the product away from radiators and other heat sources.
- Always unplug the product from mains power before cleaning and use a dry lint free cloth only.

SICHERHEITSVORSCHRIFTEN

Die folgenden allgemeinen Sicherheitsvorschriften dienen als Hilfe zur Gewährleistung Ihrer eigenen Sicherheit und zum Schutz Ihres Produkts. Weitere Details finden Sie in den Benutzeranleitungen zum Produkt.

- Statische Elektrizität kann elektronischen Komponenten schaden. Um Schäden durch statische Aufladung zu vermeiden, leiten Sie elektrostatische Ladungen von Ihrem Körper ab, (z. B. durch Berühren eines geerdeten blanken Metallteils), bevor Sie das Produkt berühren.
- Unterlassen Sie jeden Versuch, das Produkt zu warten, und versuchen Sie nicht, es in seine Bestandteile zu zerlegen. Für einige Produkte mit austauschbaren Akkus lesen Sie bitte das Benutzerhandbuch und befolgen Sie die dort beschriebenen Anleitungen.
- Vermeiden Sie, dass Speisen oder Flüssigkeiten auf Ihr Produkt gelangen, und stecken Sie keine Gegenstände in die Gehäuseschlitze oder -öffnungen Ihres Produkts.
- Verwenden Sie dieses Produkt nicht in unmittelbarer Nähe von Wasser und nicht in Bereichen mit hoher Luftfeuchtigkeit oder Kondensation, es sei denn, es ist speziell zur Nutzung in Außenbereichen vorgesehen und eingestuft.
- Halten Sie das Produkt von Heizkörpern und anderen Quellen fern, die Wärme erzeugen.
- Trennen Sie das Produkt immer von der Stromzufuhr, bevor Sie es reinigen und verwenden Sie dazu ausschließlich ein trockenes fusselfreies Tuch.

CONSIGNES DE SÉCURITÉ

Les consignes générales de sécurité ci-après sont fournies afin d'assurer votre sécurité personnelle et de protéger le produit d'éventuels dommages. Veuillez consulter les consignes d'utilisation du produit pour plus de détails.

- L'électricité statique peut endommager les composants électroniques. Déchargez l'électricité statique de votre corps (en touchant un objet en métal relié à la terre par exemple) avant de toucher le produit.
- N'essayez pas d'intervenir sur le produit et ne le démontez jamais. Pour certains produits contenant une batterie remplaçable par l'utilisateur, veuillez lire et suivre les consignes contenues dans le manuel d'utilisation.
- Ne renversez pas d'aliments ou de liquide sur le produit et n'insérez jamais d'objets dans les orifices.
- N'utilisez pas ce produit à proximité d'un point d'eau, de zones très humides ou de condensation sauf si le produit a été spécifiquement conçu pour une application extérieure.
- Éloignez le produit des radiateurs et autres sources de chaleur.
- Débranchez toujours le produit de l'alimentation avant de le nettoyer et utilisez uniquement un chiffon sec non pelucheux.

INSTRUCCIONES DE SEGURIDAD

Las siguientes directrices de seguridad general se facilitan para ayudarle a garantizar su propia seguridad personal y para proteger el producto frente a posibles daños. No olvide consultar las instrucciones del usuario del producto para obtener más información.

- La electricidad estática puede resultar nociva para los componentes electrónicos. Descargue la electricidad estática de su cuerpo (p. ej., tocando algún metal sin revestimiento conectado a tierra) antes de tocar el producto.
- No intente realizar el mantenimiento del producto ni lo desmonte nunca. Para algunos productos con batería reemplazable por el usuario, lea y siga las instrucciones del manual de usuario.
- No derrame comida o líquidos sobre el producto y nunca deje que caigan objetos en las aberturas del mismo.
- No utilice este producto cerca del agua, en zonas con humedad o condensación elevadas a menos que el producto esté clasificado específicamente para aplicación en exteriores.
- Mantenga el producto alejado de los radiadores y de otras fuentes de calor.
- Desenchufe siempre el producto de la alimentación de red antes de limpiarlo y utilice solo un paño seco sin pelusa.

ISTRUZIONI PER LA SICUREZZA

Le seguenti linee guida sulla sicurezza sono fornite per contribuire a garantire la sicurezza personale degli utenti e a proteggere il prodotto da potenziali danni. Per maggiori dettagli, consultare le istruzioni per l'utente del prodotto.

- L'elettricità statica può essere pericolosa per i componenti elettronici. Scaricare l'elettricità statica dal corpo (ad esempio toccando una parte metallica collegata a terra) prima di toccare il prodotto.
- Non cercare di riparare il prodotto e non smontarlo mai. Per alcuni prodotti dotati di batteria sostituibile dall'utente, leggere e seguire le istruzioni riportate nel manuale dell'utente.
- Non versare cibi o liquidi sul prodotto e non spingere mai alcun oggetto nelle aperture del prodotto.
- Non usare questo prodotto vicino all'acqua, in aree con elevato grado di umidità o soggette a condensa a meno che il prodotto non sia specificatamente approvato per uso in ambienti esterni.
- Tenere il prodotto lontano da caloriferi e altre fonti di calore.
- Scollegare sempre il prodotto dalla presa elettrica prima di pulirlo e usare solo un panno asciutto che non lasci filacce.

VEILIGHEIDSinFORMATIE

De volgende algemene veiligheidsinformatie werd verstrekt om uw eigen persoonlijke veiligheid te waarborgen en uw product te beschermen tegen mogelijke schade. Denk eraan om de gebruikersinstructies van het product te raadplegen voor meer informatie.

- Statische elektriciteit kan schadelijk zijn voor elektronische componenten. Ontlaad de statische elektriciteit van uw lichaam (d.w.z. het aanraken van geaard bloot metaal) voordat u het product aanraakt.
- U mag nooit proberen het product te onderhouden en u mag het product nooit demonteren. Voor sommige producten met door de gebruiker te vervangen batterij, dient u de instructies in de gebruikershandleiding te lezen en te volgen.
- Mors geen voedsel of vloeistof op uw product en u mag nooit voorwerpen in de openingen van uw product duwen.
- Gebruik dit product niet in de buurt van water, gebieden met hoge vochtigheid of condensatie, tenzij het product specifiek geclassificeerd is voor gebruik buitenshuis.
- Houd het product uit de buurt van radiators en andere warmtebronnen.
- U dient het product steeds los te koppelen van de stroom voordat u het reinigt en gebruik uitsluitend een droge pluisvrije doek.

Disposing of and Recycling Your Product

ENGLISH

EN



This symbol on the product or packaging means that according to local laws and regulations this product should not be disposed of in household waste but sent for recycling. Please take it to a collection point designated by your local authorities once it has reached the end of its life, some will accept products for free. By recycling the product and its packaging in this manner you help to conserve the environment and protect human health.

D-Link and the Environment

At D-Link, we understand and are committed to reducing any impact our operations and products may have on the environment. To minimise this impact D-Link designs and builds its products to be as environmentally friendly as possible, by using recyclable, low toxic materials in both products and packaging.

D-Link recommends that you always switch off or unplug your D-Link products when they are not in use. By doing so you will help to save energy and reduce CO2 emissions.

To learn more about our environmentally responsible products and packaging please visit www.dlinkgreen.com.

DEUTSCH

DE



Dieses Symbol auf dem Produkt oder der Verpackung weist darauf hin, dass dieses Produkt gemäß bestehender örtlicher Gesetze und Vorschriften nicht über den normalen Hausmüll entsorgt werden sollte, sondern einer Wiederverwertung zuzuführen ist. Bringen Sie es bitte zu einer von Ihrer Kommunalbehörde entsprechend amtlich ausgewiesenen Sammelstelle, sobald das Produkt das Ende seiner Nutzungsdauer erreicht hat. Für die Annahme solcher Produkte erheben einige dieser Stellen keine Gebühren. Durch ein auf diese Weise durchgeführtes Recycling des Produkts und seiner Verpackung helfen Sie, die Umwelt zu schonen und die menschliche Gesundheit zu schützen.

D-Link und die Umwelt

D-Link ist sich den möglichen Auswirkungen seiner Geschäftstätigkeiten und seiner Produkte auf die Umwelt bewusst und fühlt sich verpflichtet, diese entsprechend zu mindern. Zu diesem Zweck entwickelt und stellt D-Link seine Produkte mit dem Ziel größtmöglicher Umweltfreundlichkeit her und verwendet wiederverwertbare, schadstoffarme Materialien bei Produktherstellung und Verpackung.

D-Link empfiehlt, Ihre Produkte von D-Link, wenn nicht in Gebrauch, immer auszuschalten oder vom Netz zu nehmen. Auf diese Weise helfen Sie, Energie zu sparen und CO2-Emissionen zu reduzieren.

Wenn Sie mehr über unsere umweltgerechten Produkte und Verpackungen wissen möchten, finden Sie entsprechende Informationen im Internet unter www.dlinkgreen.com.

FRANÇAIS**FR**

Ce symbole apposé sur le produit ou son emballage signifie que, conformément aux lois et réglementations locales, ce produit ne doit pas être éliminé avec les déchets domestiques mais recyclé. Veuillez le rapporter à un point de collecte prévu à cet effet par les autorités locales; certains accepteront vos produits gratuitement. En recyclant le produit et son emballage de cette manière, vous aidez à préserver l'environnement et à protéger la santé de l'homme.

D-Link et l'environnement

Chez D-Link, nous sommes conscients de l'impact de nos opérations et produits sur l'environnement et nous engageons à le réduire. Pour limiter cet impact, D-Link conçoit et fabrique ses produits de manière aussi écologique que possible, en utilisant des matériaux recyclables et faiblement toxiques, tant dans ses produits que ses emballages.

D-Link recommande de toujours éteindre ou débrancher vos produits D-Link lorsque vous ne les utilisez pas. Vous réaliserez ainsi des économies d'énergie et réduirez vos émissions de CO2.

Pour en savoir plus sur les produits et emballages respectueux de l'environnement, veuillez consulter le www.dlinkgreen.com.

ESPAÑOL**ES**

Este símbolo en el producto o el embalaje significa que, de acuerdo con la legislación y la normativa local, este producto no se debe desechar en la basura doméstica sino que se debe reciclar. Llévelo a un punto de recogida designado por las autoridades locales una vez que ha llegado al fin de su vida útil; algunos de ellos aceptan recogerlos de forma gratuita. Al reciclar el producto y su embalaje de esta forma, contribuye a preservar el medio ambiente y a proteger la salud de los seres humanos.

D-Link y el medio ambiente

En D-Link, comprendemos y estamos comprometidos con la reducción del impacto que puedan tener nuestras actividades y nuestros productos en el medio ambiente. Para reducir este impacto, D-Link diseña y fabrica sus productos para que sean lo más ecológicos posible, utilizando materiales reciclables y de baja toxicidad tanto en los productos como en el embalaje.

D-Link recomienda apagar o desenchufar los productos D-Link cuando no se estén utilizando. Al hacerlo, contribuirá a ahorrar energía y a reducir las emisiones de CO2.

Para obtener más información acerca de nuestros productos y embalajes ecológicos, visite el sitio www.dlinkgreen.com.

ITALIANO**IT**

La presenza di questo simbolo sul prodotto o sulla confezione del prodotto indica che, in conformità alle leggi e alle normative locali, questo prodotto non deve essere smaltito nei rifiuti domestici, ma avviato al riciclo. Una volta terminato il ciclo di vita utile, portare il prodotto presso un punto di raccolta indicato dalle autorità locali. Alcuni questi punti di raccolta accettano gratuitamente i prodotti da riciclare. Scegliendo di riciclare il prodotto e il relativo imballaggio, si contribuirà a preservare l'ambiente e a salvaguardare la salute umana.

D-Link e l'ambiente

D-Link cerca da sempre di ridurre l'impatto ambientale dei propri stabilimenti e dei propri prodotti. Allo scopo di ridurre al minimo tale impatto, D-Link progetta e realizza i propri prodotti in modo che rispettino il più possibile l'ambiente, utilizzando materiali riciclabili a basso tasso di tossicità sia per i prodotti che per gli imballaggi.

D-Link raccomanda di spegnere sempre i prodotti D-Link o di scollegarne la spina quando non vengono utilizzati. In questo modo si contribuirà a risparmiare energia e a ridurre le emissioni di anidride carbonica.

Per ulteriori informazioni sui prodotti e sugli imballaggi D-Link a ridotto impatto ambientale, visitate il sito all'indirizzo www.dlinkgreen.com.

NEDERLANDS**NL**

Dit symbool op het product of de verpakking betekent dat dit product volgens de plaatselijke wetgeving niet mag worden weggegooid met het huishoudelijk afval, maar voor recyclage moeten worden ingeleverd. Zodra het product het einde van de levensduur heeft bereikt, dient u het naar een inzamelpunt te brengen dat hiertoe werd aangeduid door uw plaatselijke autoriteiten, sommige autoriteiten accepteren producten zonder dat u hiervoor dient te betalen. Door het product en de verpakking op deze manier te recyclen helpt u het milieu en de gezondheid van de mens te beschermen.

D-Link en het milieu

Bij D-Link spannen we ons in om de impact van onze handelingen en producten op het milieu te beperken. Om deze impact te beperken, ontwerpt en bouwt D-Link zijn producten zo milieuvriendelijk mogelijk, door het gebruik van recycleerbare producten met lage toxiciteit in product en verpakking.

D-Link raadt aan om steeds uw D-Link producten uit te schakelen of uit de stekker te halen wanneer u ze niet gebruikt. Door dit te doen bespaart u energie en beperkt u de CO₂-emissies.

Breng een bezoek aan www.dlinkgreen.com voor meer informatie over onze milieuverantwoorde producten en verpakkingen.

POLSKI**PL**

Ten symbol umieszczony na produkcie lub opakowaniu oznacza, że zgodnie z miejscowym prawem i lokalnymi przepisami niniejszego produktu nie wolno wyrzucać jak odpady czy śmieci z gospodarstwa domowego, lecz należy go poddać procesowi recyklingu. Po zakończeniu użytkowania produktu, niektóre odpowiednie do tego celu podmioty przyjmą takie produkty nieodpłatnie, dlatego prosimy dostarczyć go do punktu zbiórki wskazanego przez lokalne władze. Poprzez proces recyklingu i dzięki takiemu postępowaniu z produktem oraz jego opakowaniem, pomogą Państwo chronić środowisko naturalne i dbać o ludzkie zdrowie.

D-Link i środowisko

D-Link podchodzimy w sposób świadomy do ochrony otoczenia oraz jesteśmy zaangażowani w zmniejszanie wpływu naszych działań i produktów na środowisko naturalne. W celu zminimalizowania takiego wpływu firma D-Link konstruuje i wytwarza swoje produkty w taki sposób, aby były one jak najbardziej przyjazne środowisku, stosując do tych celów materiały nadające się do powtórnego wykorzystania, charakteryzujące się małą toksycznością zarówno w przypadku samych produktów jak i opakowań.

Firma D-Link zaleca, aby Państwo zawsze prawidłowo wyłączali z użytku swoje produkty D-Link, gdy nie są one wykorzystywane. Postępując w ten sposób pozwalają Państwo oszczędzać energię i zmniejszać emisje CO₂.

Aby dowiedzieć się więcej na temat produktów i opakowań mających wpływ na środowisko prosimy zapoznać się ze stroną Internetową www.dlinkgreen.com.

ČESKY**CZ**

Tento symbol na výrobku nebo jeho obalu znamená, že podle místně platných předpisů se výrobek nesmí vyhazovat do komunálního odpadu, ale odeslat k recyklaci. Až výrobek doslouží, odnese jej prosím na sběrné místo určené místními úřady k tomuto účelu. Některá sběrná místa přijímají výrobky zdarma. Recyklací výrobku i obalu pomáháte chránit životní prostředí i lidské zdraví.

D-Link a životní prostředí

Ve společnosti D-Link jsme si vědomi vlivu našich provozů a výrobků na životní prostředí a snažíme se o minimalizaci těchto vlivů. Proto své výrobky navrhujeme a vyrábíme tak, aby byly co nejekologičtější, a ve výrobcích i obalech používáme recyklovatelné a nízkotoxické materiály.

Společnost D-Link doporučuje, abyste své výrobky značky D-Link vypnuli nebo vytáhli ze zásuvky vždy, když je nepoužíváte. Pomůžete tak šetřit energii a snížit emise CO₂.

Více informací o našich ekologických výrobcích a obalech najdete na adrese www.dlinkgreen.com.

MAGYAR**HU**

Ez a szimbólum a terméken vagy a csomagoláson azt jelenti, hogy a helyi törvényeknek és szabályoknak megfelelően ez a termék nem semmisíthető meg a háztartási hulladékkal együtt, hanem újrahasznosításra kell küldeni. Kérjük, hogy a termék élettartamának elteltét követően vigye azt a helyi hatóság által kijelölt gyűjtőhelyre. A termékek egyes helyeken ingyen elhelyezhetők. A termék és a csomagolás újrahasznosításával segíti védeni a környezetet és az emberek egészségét.

A D-Link és a környezet

A D-Linknél megértjük és elköteleztük magunkat a műveleteink és termékeink környezetre gyakorolt hatásainak csökkentésére. Az ezen hatás csökkentése érdekében a D-Link a lehető leginkább környezetbarát termékeket tervez és gyárt azáltal, hogy újrahasznosítható, alacsony károsanyag-tartalmú termékeket gyárt és csomagolásokat alkalmaz.

A D-Link azt javasolja, hogy mindig kapcsolja ki vagy húzza ki a D-Link termékeket a tápforrásból, ha nem használja azokat. Ezzel segít az energia megtakarításában és a széndioxid kibocsátásának csökkentésében.

Környezetbarát termékeinkről és csomagolásainkról további információkat a www.dlinkgreen.com weboldalon tudhat meg.

NORSK**NO**

Dette symbolet på produktet eller forpakningen betyr at dette produktet ifølge lokale lover og forskrifter ikke skal kastes sammen med husholdningsavfall, men leveres inn til gjenvinning. Vennligst ta det til et innsamlingssted anvist av lokale myndigheter når det er kommet til slutten av levetiden. Noen steder aksepteres produkter uten avgift. Ved på denne måten å gjenvinne produktet og forpakningen hjelper du å verne miljøet og beskytte folks helse.

D-Link og miljøet

Hos D-Link forstår vi oss på og er forpliktet til å minske innvirkningen som vår drift og våre produkter kan ha på miljøet. For å minimalisere denne innvirkningen designer og lager D-Link produkter som er så miljøvennlig som mulig, ved å bruke resirkulerbare, lav-toksiske materialer både i produktene og forpakningen.

D-Link anbefaler at du alltid slår av eller frakobler D-Link-produkter når de ikke er i bruk. Ved å gjøre dette hjelper du å spare energi og å redusere CO2-utslipp.

For mer informasjon angående våre miljøansvarlige produkter og forpakninger kan du gå til www.dlinkgreen.com.

DANSK**DK**

Dette symbol på produktet eller emballagen betyder, at dette produkt i henhold til lokale love og regler ikke må bortskaffes som husholdningsaffald, mens skal sendes til genbrug. Indlever produktet til et indsamlingssted som angivet af de lokale myndigheder, når det er nået til slutningen af dets levetid. I nogle tilfælde vil produktet blive modtaget gratis. Ved at indlevere produktet og dets emballage til genbrug på denne måde bidrager du til at beskytte miljøet og den menneskelige sundhed.

D-Link og miljøet

Hos D-Link forstår vi og bestræber os på at reducere enhver indvirkning, som vores aktiviteter og produkter kan have på miljøet. For at minimere denne indvirkning designer og producerer D-Link sine produkter, så de er så miljøvenlige som muligt, ved at bruge genanvendelige materialer med lavt giftighedsniveau i både produkter og emballage.

D-Link anbefaler, at du altid slukker eller frakobler dine D-Link-produkter, når de ikke er i brug. Ved at gøre det bidrager du til at spare energi og reducere CO₂-udledningerne.

Du kan finde flere oplysninger om vores miljømæssigt ansvarlige produkter og emballage på www.dlinkgreen.com.

SUOMI**FI**

Tämä symboli tuotteen pakkauksessa tarkoittaa, että paikallisten lakien ja säännösten mukaisesti tätä tuotetta ei pidä hävittää yleisen kotitalousjätteen seassa vaan se tulee toimittaa kierrätettäväksi. Kun tuote on elinkaarensa päässä, toimita se lähimpään viranomaisten hyväksymään kierrätyspisteeseen. Kierrättämällä käytetyn tuotteen ja sen pakkauksen autat tukemaan sekä ympäristön että ihmisten terveyttä ja hyvinvointia.

D-Link ja ympäristö

D-Link ymmärtää ympäristönsuojelun tärkeyden ja on sitoutunut vähentämään tuotteistaan ja niiden valmistuksesta ympäristölle mahdollisesti aiheutuvia haittavaikutuksia. Nämä negatiiviset vaikutukset minimoidakseen D-Link suunnittelee ja valmistaa tuotteensa mahdollisimman ympäristöystävällisiksi käyttämällä kierrätettäviä, alhaisia pitoisuuksia haitallisia aineita sisältäviä materiaaleja sekä tuotteissaan että niiden pakkauksissa.

Suosittelamme, että irrotat D-Link-tuotteesi virtalähteestä tai sammutat ne aina, kun ne eivät ole käytössä. Toimimalla näin autat säästämään energiaa ja vähentämään hiilidioksiidipäästöjä.

Lue lisää ympäristöystävällisistä D-Link-tuotteista ja pakkauksistamme osoitteesta www.dlinkgreen.com.

SVENSKA**SE**

Den här symbolen på produkten eller förpackningen betyder att produkten enligt lokala lagar och föreskrifter inte skall kastas i hushållssoporna utan i stället återvinnas. Ta den vid slutet av dess livslängd till en av din lokala myndighet utsedd uppsamlingsplats, vissa accepterar produkter utan kostnad. Genom att på detta sätt återvinna produkten och förpackningen hjälper du till att bevara miljön och skydda människors hälsa.

D-Link och miljön

På D-Link förstår vi och är fast beslutna att minska den påverkan våra verksamheter och produkter kan ha på miljön. För att minska denna påverkan utformar och bygger D-Link sina produkter för att de ska vara så miljövänliga som möjligt, genom att använda återvinningsbara material med låg gifthalt i både produkter och förpackningar.

D-Link rekommenderar att du alltid stänger av eller kopplar ur dina D-Link produkter när du inte använder dem. Genom att göra detta hjälper du till att spara energi och minska utsläpp av koldioxid.

För mer information om våra miljöansvariga produkter och förpackningar www.dlinkgreen.com.

PORTUGUÊS**PT**

Este símbolo no produto ou embalagem significa que, de acordo com as leis e regulamentações locais, este produto não deverá ser eliminado juntamente com o lixo doméstico mas enviado para a reciclagem. Transporte-o para um ponto de recolha designado pelas suas autoridades locais quando este tiver atingido o fim da sua vida útil, alguns destes pontos aceitam produtos gratuitamente. Ao reciclar o produto e respectiva embalagem desta forma, ajuda a preservar o ambiente e protege a saúde humana.

A D-Link e o ambiente

Na D-Link compreendemos e comprometemo-nos com a redução do impacto que as nossas operações e produtos possam ter no ambiente. Para minimizar este impacto a D-Link concebe e constrói os seus produtos para que estes sejam o mais inofensivos para o ambiente possível, utilizando materiais recicláveis e não tóxicos tanto nos produtos como nas embalagens.

A D-Link recomenda que desligue os seus produtos D-Link quando estes não se encontrarem em utilização. Com esta acção ajudará a poupar energia e reduzir as emissões de CO₂.

Para saber mais sobre os nossos produtos e embalagens responsáveis a nível ambiental visite www.dlinkgreen.com.