

D-Link[®]

DWL-120

Wireless USB Adapter

User's Manual

Table of Contents for the DWL-120 Wireless USB Adapter

Introduction	i
Contents of Package	ii
Wireless Basics	1
Getting Started	3
Configuration Utility	10
Troubleshooting	20
Networking Basics	38
Technical Support	65
Specifications	66
Warranty	70
Registration	75


INTRODUCTION

The D-Link DWL-120 802.11b Wireless USB Adapter is an ideal way to connect your laptop computer to a wireless network or as part of a wired LAN (Local Area Network) with a wireless network segment. After completing the steps outlined in this manual, you will have the ability to share information and resources - such as files and printers- and take full advantage of a “connected” environment for work and play!

This DWL-120 comes with drivers for the most popular operating systems and can be integrated into a large network. The User’s Manual is designed to help you connect your computer to a network when running Windows 98, Windows ME, or Windows 2000 in either Ad Hoc mode (without an Access Point) or Infrastructure mode (with an Access Point). Yet the IEEE802.11b standards compliance means this adapter gives you the flexibility to connect it to any 802.11b networks. The IEEE 802.11b Ethernet standard allows you to connect computers and devices at speeds up to 11Mbps, depending on the distance between wireless adapters.

This manual provides a quick introduction to wireless technology and its application as it relates to networking. Take a moment to read through this manual and familiarize yourself with wireless technology. But you should also give yourself some time to play with your new wireless network.

CONTENTS OF PACKAGE

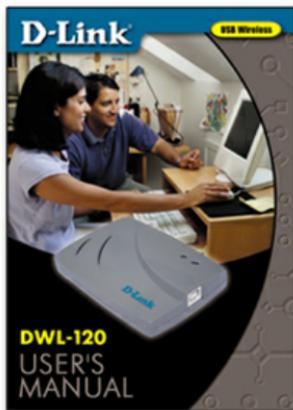


C



A



D

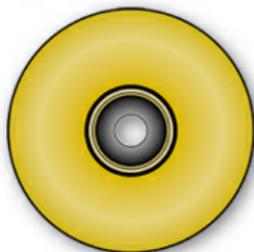

B

DWL-120 Wireless USB Adapter Package Contents

A	DWL-120 Wireless USB Adapter with cable
B	Driver CD
C	User's Manual
D	Quick Install Guide

WIRELESS BASICS

Your new D-Link Air product is based on industry standards to provide easy to use and compatible high speed wireless connectivity within your home or business. Strictly adhering to IEEE 802.11b, the D-Link Air family of products will allow you to access the data you want, when and where you want it. No longer will you be tethered to a workstation or forced to run new wiring. You will be able to enjoy the freedom that wireless networking delivers.

Standards Based Technology

Based on IEEE 802.11b, D-Link Air products can perform up to 11 Megabits per second. This means you will be able to transfer large files quickly or even watch a Movie in MPEG format over your network without noticeable delays. This technology works by using multiple frequencies in the 2.4GHz range utilizing Direct Sequence Spread Spectrum (DSSS) technology. D-Link Air products will automatically sense the best possible connection speed to ensure the greatest speed and range possible with the technology.

Installation Considerations

Designed to go up to 100 meters indoors and up to 300 meters outdoors, D-Link Air lets you access your network from anywhere you want. However, keep in mind, that range is limited by the number of walls, ceilings, or other objects that the wireless signals must pass through. Typical ranges vary depending on the types of materials and background RF noise in your home or business. The key to maximizing range is to follow these basic principles:

WIRELESS BASICS

1. **Keep the number of walls and ceilings to a minimum -**
Each wall or ceiling can rob your D-Link Air Wireless product from 1-30M of range. Position your Access Points, Residential Gateways, and computers so that the number of walls or ceilings is minimized.
2. **Be aware of the direct line between Access Points, Residential Gateways, and Computers -**
A wall that is .5 meters thick, at a 45 degree angle appears to be almost 1 meter thick. At a 2 degree angle it looks over 14 meters thick! Try to make sure that the AP and Adapters are positioned so that the signal will travel straight through a wall or ceiling for better reception.
3. **Building Materials make a difference -**
A solid metal door or aluminum studs may have a negative effect on range. Again, try to position Access Points, Residential Gateways, and Computers so that the signal passes through drywall or open doorways and not other materials.
4. **Make sure that the antenna is positioned for best reception**
by using the software signal strength tools included with your product.
5. **Keep your product away (at least 1-2 meters) from electrical devices**
that generate RF noise, like microwaves, Monitors, electric motors, etc.

For the average American 4-bedroom home, range should not be a problem. If you experience low or no signal strength in areas of your home that you wish to access, consider positioning the Access Point in a location directly between the Residential Gateways and/or Computers that will be connected. Additional Access Points can be connected to provide better coverage in rooms where the signal does not appear as strong as desired.

GETTING STARTED


To begin, you must select the type of wireless network you will be building and follow the relevant instructions.

Which statement below best describes the type of network you want to build?

The Home Internet Network with A Residential Gateway, Firewall, or Router(LAN administrators with Dynamic IPs should follow these instructions)

"I have 2 or more computers and/or laptops and want to share files, printers, and Internet access using a Residential Gateway, Router, or Firewall or I want to connect to an Ethernet network that uses Dynamic (DHCP) IP addresses"
(requires a Wireless Router or Access Point and Ethernet capable Gateway, Router, or Firewall or an existing Ethernet network).

When you have installed your wireless network it will look like this:

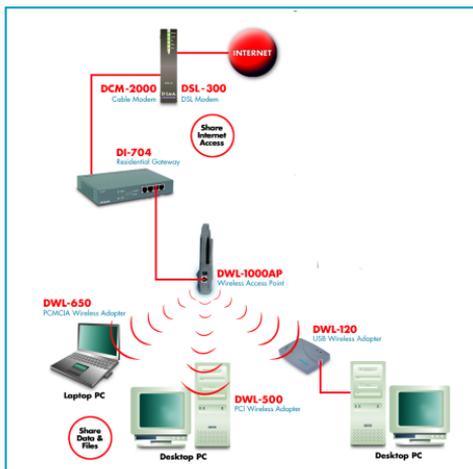

GETTING STARTED

Please note that this type of installation requires that your Residential Gateway, Router, Firewall or Network Administrator can give you a dynamic IP address for each computer. Please consult the documentation that comes with your Access Point to determine its necessary configuration.

To complete this installation, please follow these steps:

1. Using the provided Ethernet cable, connect the router to the Cable/DSLmodem. Also connect the Access Point to the Router.
2. Install the Wireless Adapter - see the Quick Install Guides.
3. Check the wireless connection- see Configuration Utility and Networking Basics section.
4. Check IP Address for the wireless adapter - see Networking Basics section.

NOTE: The default settings for the wireless adapter is set to obtain a Dynamic IP Address.


5. Learn to share printers and files - see Networking Basics section.

GETTING STARTED

The Home Internet Network with Multiple IPs (LAN administrators with Static IPs should follow these instructions).

"I have 2 or more computers and/or laptops and want to share files, printers, and Internet access using multiple IP addresses that I have purchased from my Internet Service Provider or I want to connect to an Ethernet network that uses Static IP addresses" (requires Access Point, Ethernet capable Broadband modem, and multiple IP address Internet Account or an existing Ethernet network).

When you have installed your wireless network it will look like this:

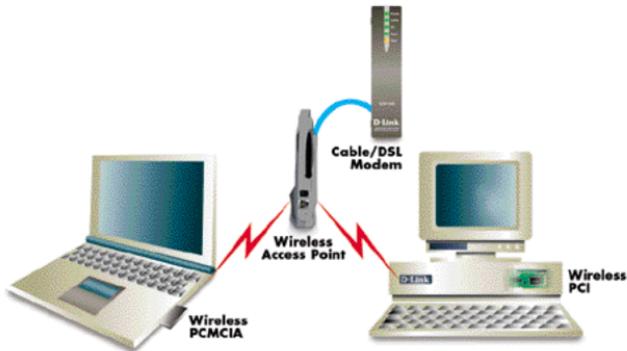

GETTING STARTED

Please note that this type of installation requires that your ISP or Network Administrator can give you a static IP address for each computer. Please consult the documentation that comes with your Access Point to determine its necessary configuration.

To complete this installation, please follow these steps:

1. Using the provided Ethernet cable, connect the router to the Cable/DSLmodem. Also connect the Access Point to the Router.
2. Install the wireless Adapter - see the Quick Install Guides.
3. Check the wireless connection- see Configuration Utility and Networking Basics section.
4. Set Static IP Address for the wireless Adapter - see Networking Basics section.

NOTE: *If you are using a PPPoE client, go to “Networking Basics section” instead. Verify the settings with your ISP or Network Administrator if necessary.*

5. Learn to share printers and files - see Networking Basics.

GETTING STARTED

The Ad Hoc Network

"I have 2 or more computers and/or laptops and just want to share files and printers."

When you have installed your wireless network it will look like this:



To complete this installation, please follow these steps:

1. Install the wireless adapter - see the Quick Install Guides.
2. Set Static IP Address for the wireless adapter - see Networking Basics section.
3. Check the wireless connection- see Configuration Utility and Networking Basics section.
4. Learn to share printers and file - See Networking Basics.

GETTING STARTED

The Ad Hoc Network with Internet Sharing

"I have 2 or more computers and/or laptops and want to share files, printers, and Internet access using one computer or laptop as an Internet Server" (requires Internet sharing software).

When you have installed your wireless network it will look like this:



To share an Internet connection with Internet Sharing software you will need to purchase Internet Sharing software or use Windows 98SE's or ME's Internet Connection Sharing (ICS) utility. Please follow your software documentation to properly configure the Internet sharing software after you install your wireless networking adapters. To install your wireless network adapter follow these steps:

GETTING STARTED

If the Internet Sharing Software will be installed on the same computer into which you are installing this wireless network adapter follow these steps:

1. Install the wireless adapter - see the Quick Install Guides.
2. Set Static IP Address for the wireless adapter - see Networking Basics section.
3. Check the wireless connection- see Configuration Utility and Networking Basics section.
4. Learn to share printers and file - See Networking Basics.
5. Install your Internet Sharing Software.

If the Internet Sharing Software is installed on a different computer follow these steps:

1. Install the wireless adapter - see the Quick Install Guides.
2. Check IP Address for the wireless adapter - see Networking Basics section.

NOTE: The default settings for the wireless adapter is set to obtain a Dynamic IP Address.

3. Check the Wireless connection- see Configuration Utility and Networking Basics section.
4. Learn to share printers and file - See Networking Basics.

CONFIGURATION UTILITY

D-Link Air adapter products use the "Configuration Utility" as the management software. The utility provides the user an easy interface to change any settings related to the wireless adapter. When the computer is started, the "Configuration Utility" starts automatically and the system tray icon is loaded in the toolbar. Clicking on the utility icon will start the Configuration Utility. Another way to start the Configuration Utility is to click on **Start > Programs > D-Link DWL-120 11Mbps WLAN > DWL-120 wireless Configuration**.

If the utility icon appears with a red "X" in the toolbar, then the utility did not install properly and will need to be reinstalled.

Sometimes the icon will be red which happens when the wireless adapter is set to a different channel or the communication mode is set incorrectly. Verify the settings for the D-Link Air product and check that computer is within wireless range.

When the utility is started, the following screen will be displayed.

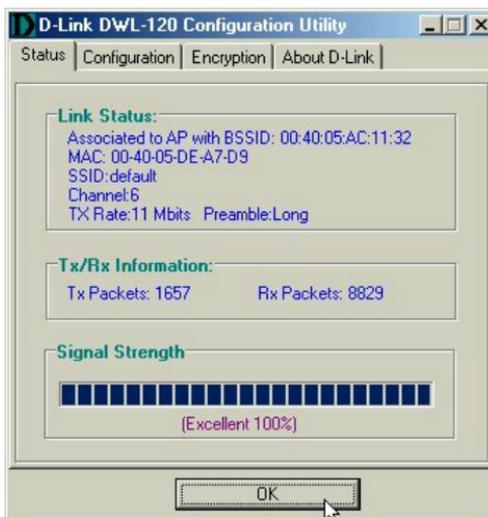


Figure 1 - Configuration Utility with opened "Status" tab

CONFIGURATION UTILITY

STATUS TAB

Link Status

The field will display the current state of the wireless adapter.

1. Associated - means that the wireless adapter is connected to another wireless adapter or Access Point / Wireless Gateway Router. The MAC address of the wireless adapter or Access Point will be displayed in hex format i.e. BSS ID (Basic Service Set ID) = 00:40:05:AC:11:32. Networking is available when the wireless adapter is associated to an Access point or another wireless adapter.

2. Scanning - means that the node is searching for available Access Point and trying to detect the SSID (Service Set ID) of an Access Point within range.

NOTE: When the wireless is set to “Ad Hoc” mode, the wireless adapter will scan for 5 seconds looking for an existing Ad Hoc network using the same SSID. If one is not found the driver will “Start” its own Ad Hoc network.

MAC

Displays the MAC address of the D-Link adapter product.

SSID (Service Set Identification)

Displays the current SSID setting of the D-Link Air adapter product.

Channel and Tx Rate

Shows the selected channel and transmit rate that are currently used by the D-Link Air adapter for an active connection.

Tx/Rx Information

These two fields display the instantaneous wireless receive and transmit throughput displayed in bytes per second. These values are updated every two seconds.

CONFIGURATION UTILITY

Signal Strength

The Signal Strength bar graph is only active when the node is in Infrastructure Mode. The bar graph displays normalized signal strength as reported by the radio, averaged over all frames over 100 bytes long that are received from the Access Point. A label summarizes the quality of the link over the bar graph, which can take on one of the following values:

"Not Applicable"

"Poor"

"Fair"

"Good"

"Excellent"

The D-Link Air adapter will start looking for a better Access Point if the Link Quality becomes "Poor." Link Quality is a measure of receive and transmit errors over the radio channel.

CONFIGURATION TAB

The Configuration Tab contains several fields where the operating parameters of the D-Link Air product can be viewed and changed. Changes to any of the parameters in the panel can be applied to the wireless adapter without the need to reboot the PC.

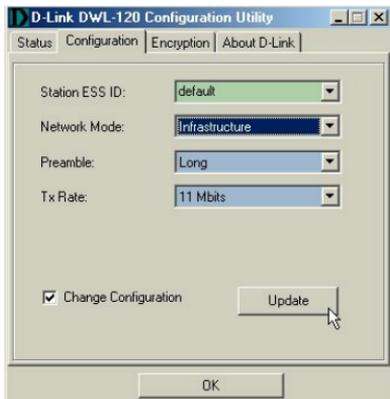


Figure 2 - Configuration Utility with opened "Configuration" tab.

CONFIGURATION UTILITY

Change Configuration

Check the box to make changes to the default settings of the D-Link Air product.

Update

Pressing the button applies and saves any settings that have been changed for the D-Link Air product.

Station ESS ID (Extended Service Set Identifier)

The field allows the user to set the identification by typing the name for a particular group of connected wireless adapters and Access Point. The SSID has the name “default” as the initial settings after the drivers are loaded. The D-Link Air product will be able to connect to an Access Point with the same ESS ID.

CONFIGURATION UTILITY

Network Mode

The field allows selection from a list of supported Network "Modes." The supported modes displayed are the following: "Ad Hoc," and "Infrastructure." The default setting for the "Network Mode" is "Infrastructure."

1. Ad Hoc - This is the 802.11b peer-to-peer mode of operation. In "Ad Hoc" mode, only one wireless "cell" is supported for each different SSID. All communication is done from client to client without the use of an Access Point. "802.11b Ad Hoc" networking uses the same SSID for the wireless adapters for establishing the network connection. When "Ad Hoc" mode is selected the utility will provide a selection for setting the channel.

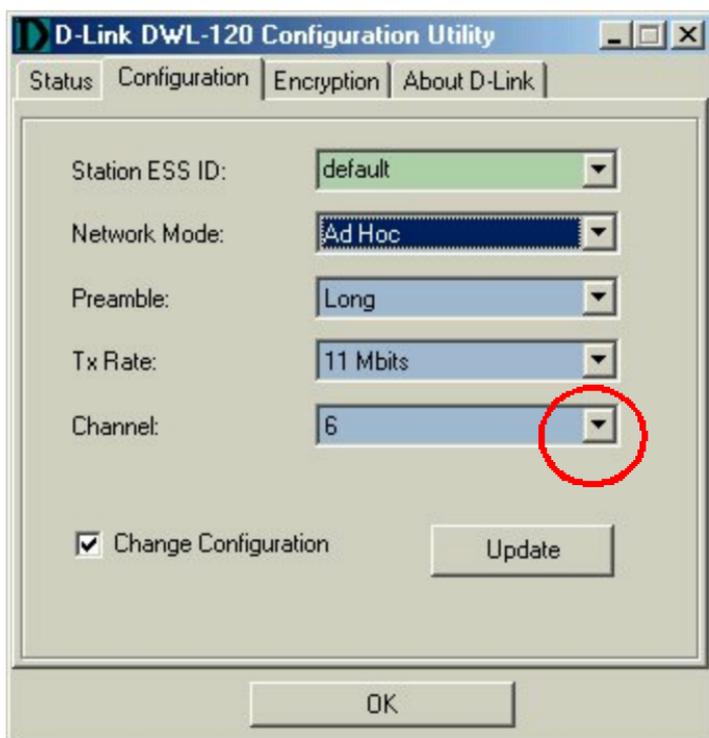


Figure 3: "Configuration" tab with Network mode set to Ad Hoc.

CONFIGURATION UTILITY

2. Infrastructure - This mode of operation requires the presence of an 802.11b Access Point. All communication is done through the Access Point which relays packets to other wireless clients as well as to nodes on a wired Ethernet network.

Preamble

The field allows two different selections: Long and Short. The default setting for the “Preamble” field is set to “Long.”

1. Long - The mandatory supported “Long preamble as well as header” as specified in IEEE 802.11b that allows interoperation with the current 1Mbit/sec and 2Mbit/sec DSS (Direct Sequence Spread Spectrum) specification.

2. Short - The optional “Short preamble and header” is intended for applications where maximum throughput is desired and interoperability with legacy and non-short preamble capable equipment is not a consideration.

Tx Rate

The transmission rate is set “1Mbit, 2Mbits, 5.5Mbits, as well as 11Mbits.”

CONFIGURATION UTILITY

ENCRYPTION TAB

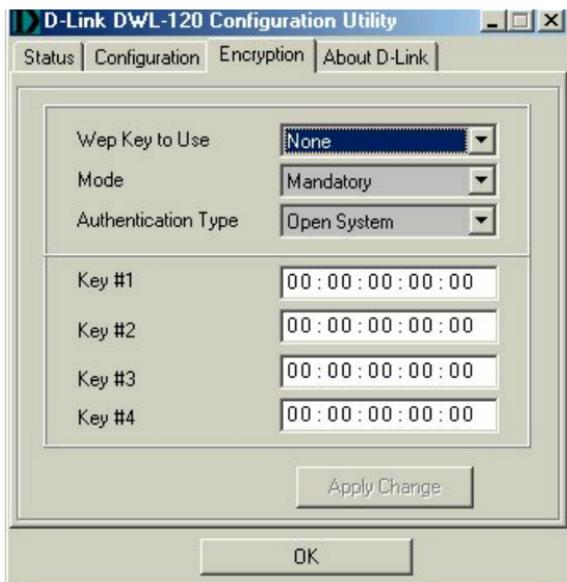


Figure 3 - Configuration Utility with opened "Encryption" tab

If an additional measure of security is desired on the wireless network, WEP (Wired Equivalent Privacy) encryption can be enabled. WEP encrypts each frame transmitted from the wireless adapter using one of the keys entered in the "WEP Key Entry" field.

CONFIGURATION UTILITY

The Access Point or wireless adapter will accept only encrypted frames that it can decrypt correctly. This will only happen if the receiver has the "WEP Key" used by the transmitter.

The panel allows the entry of four keys for encryption. Each key must consist of hex digits, which means that only digits 0-9 and letters A-F are valid entries. The Configuration Utility will not apply keys that are not entered correctly.

Wep Key to Use

None - The default setting for the D-Link Air product. Set encryption to "None" when encryption is not necessary.

Key 1 - Key 4

These four fields are used to manually enter the encryption keys. This will be necessary when using encryption or matching keys with a different vendor's product.

Mode

There are two options for the "Mode" settings: Mandatory and Optional. The default setting for the D-Link Air product is set to "Mandatory."

Mandatory

WEP Encryption is required to establish connection with other stations within the wireless network. The "Mandatory" mode is compliant with IEEE 802.11b standard.

Optional

"Optional" mode allows the D-Link Air product to communicate with other stations within the wireless network regardless if WEP encryption is enabled or disabled in the other stations.

CONFIGURATION UTILITY

Authentication Type

IEEE 802.11b supports two types of authentication:
Open System and Shared Key.

Open System

The default selection is set to “Open System” as the authentication algorithm used by D-Link Air product. If the Access Point is using “Open System” authentication, then the wireless adapter will need to be set to the same authentication type.

Shared Key

Shared Key authentication is available only when WEP (Wired Equivalent Privacy) encryption is enabled on the D-Link Air products. Shared Key authentication supports authentication of hosts as either a member of a group with a shared secret key or a member of those who do not have a shared secret key. IEEE 802.11b Shared Key authentication requires the use of WEP privacy mechanism to share the key without transmitting the secret key in the open.

Apply Change

This button becomes active only when one of the fields has been modified. Press the button to apply any changes made in the Encryption settings.

CONFIGURATION UTILITY

ABOUT TAB

About tab shows the product versions of the Driver and Configuration Utility.

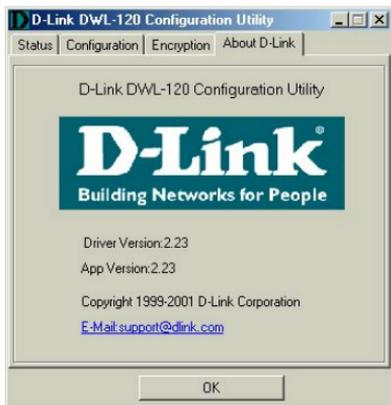


Figure 4 - Configuration Utility with opened "ABOUT" tab

TROUBLESHOOTING


A network can be simple to install and maintain. However, occasionally something might go wrong. The best approach to troubleshooting network problems is to start at the very simplest level and work your way up.

On the following pages we have covered many of the common troubleshooting situations. Please read through these pages or skip to the specific one that interests you.

TROUBLESHOOTING

UNDERSTANDING THE INDICATOR

Your Network Adapter has an indicator or light that can give you information about your network traffic and help you determine problems when troubleshooting.

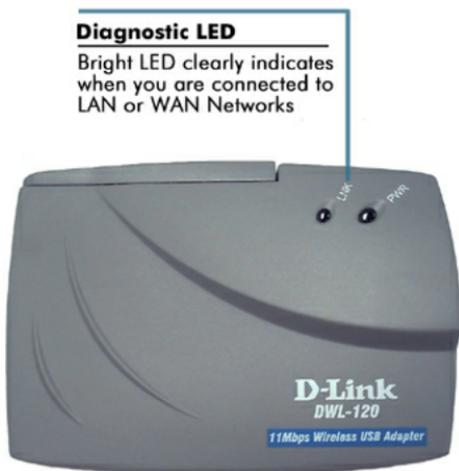

The DWL-120 PC Wireless USB Adapter has an indicator labeled “LINK” on the top panel. A flashing green “LINK” light indicates that the Network Adapter is sending or receiving data.

TROUBLESHOOTING


VERIFYING DRIVER INSTALLATION

To check that the wireless network adapter drivers are loaded properly:

- A. Go to: **Start>Settings>Control Panel**




TROUBLESHOOTING

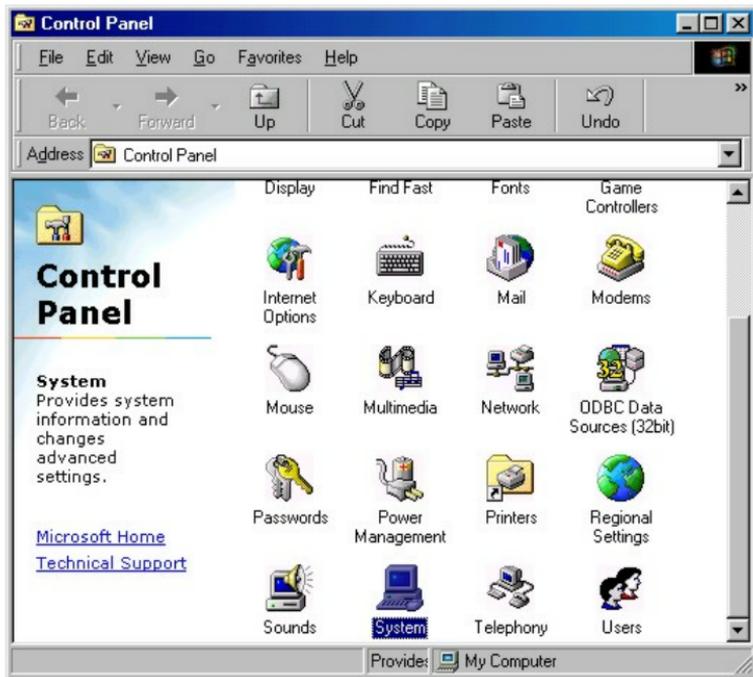


B. Double click on "System".

TROUBLESHOOTING

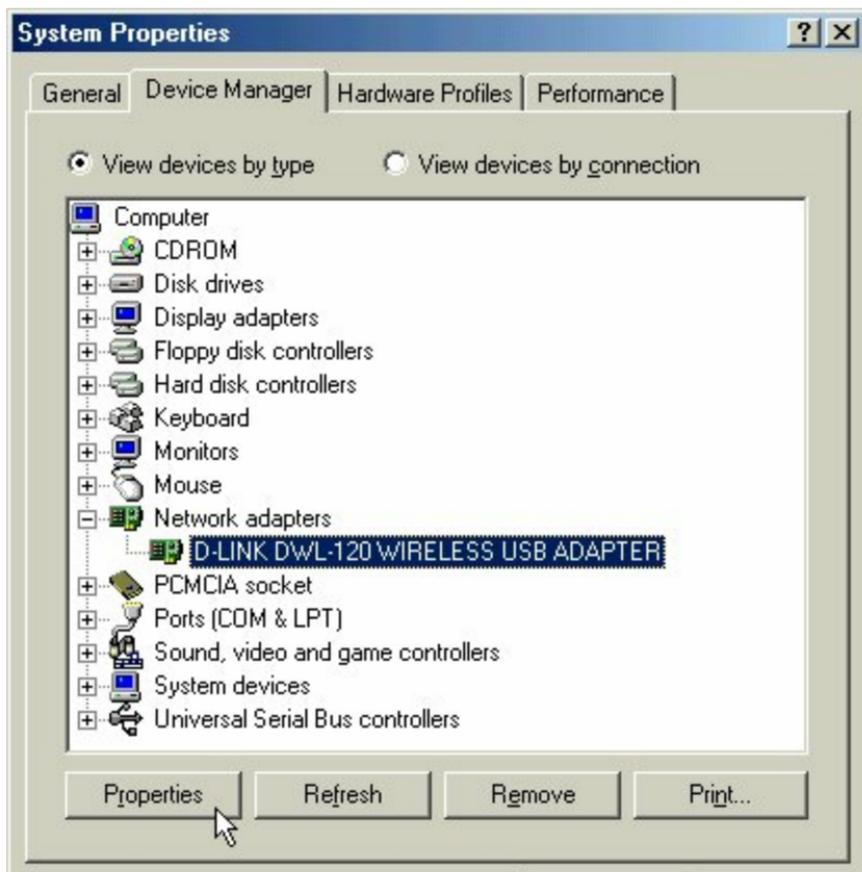

- C. Click on the “Device Manager” Tab
- D. Click on the + symbol in front of “Network Adapters”
- E. Highlight “D-Link DWL-120 wireless USB adapter”
- F. Click on “Properties”

TROUBLESHOOTING

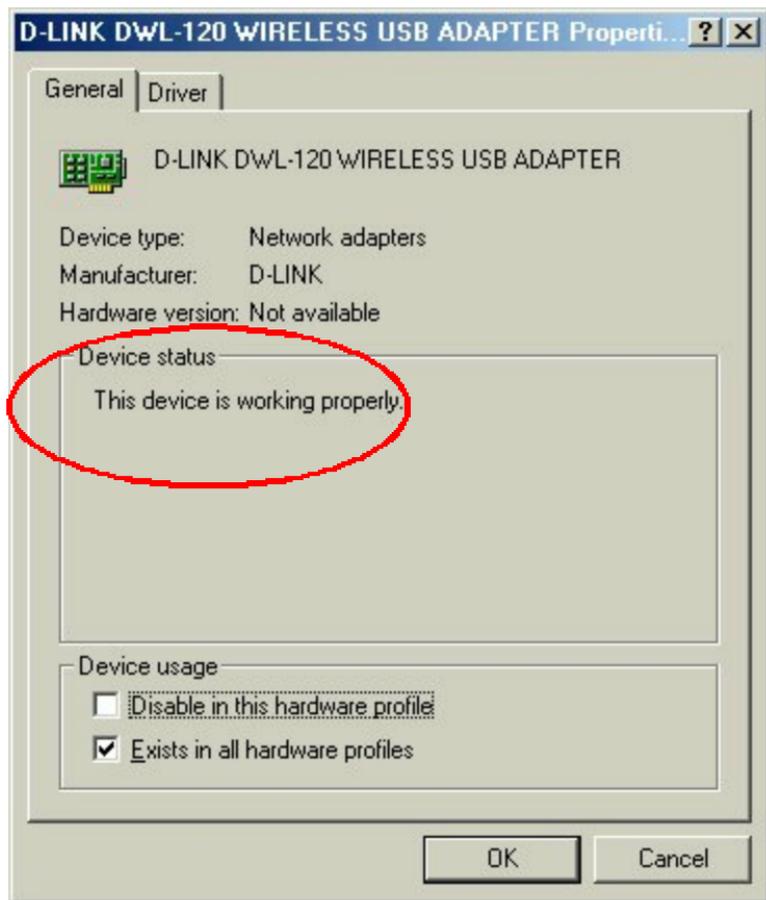

- G. Check under "Device Status" to see if the DWL-120 is working properly.

TROUBLESHOOTING


CHECKING THE WIRELESS ADAPTER CONFIGURATION

- A. Go to: **START>Programs>D-Link DWL-120 11Mbps WLAN>DWL-120 wireless Configuration**



TROUBLESHOOTING

CHECKING THE WIRELESS ADAPTER CONFIGURATION **cont.**

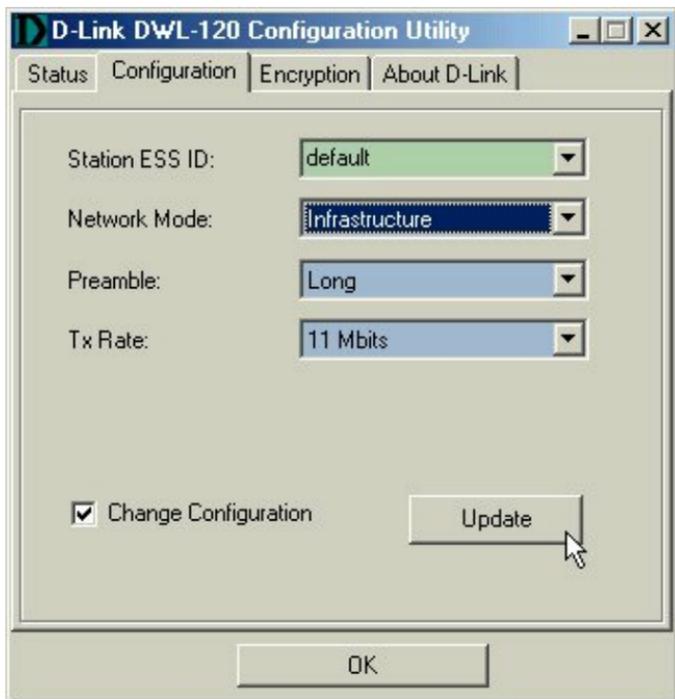


- B. Select the “Configuration” Tab.
- C. Check that the Network mode is set properly to “Infrastructure” mode when there is an Access Point in the network. Otherwise, the mode should be set to “Ad Hoc.”
- D. To change any settings, check the box labeled “Change Configuration,” then click on the arrow for the drop down menu.
Highlight the desired setting, then click on the “Update” box, and click OK.

TROUBLESHOOTING

CHECKING THE ACCESS POINT CONFIGURATION

- A. Go to: **START>Programs>D-Link wireless LAN>D-Link AP Manager**

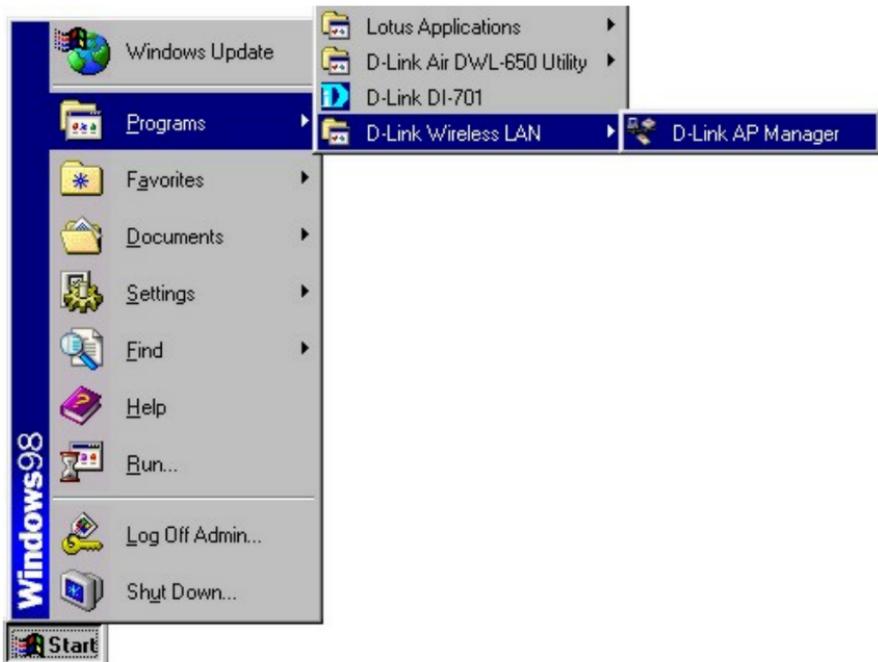

- B. Check that the “IP Address,” assigned to the Access Point is within the range assigned by the DHCP server. When using D-Link routers, the DHCP server will assign an IP range of 192.168.0.2 - 192.168.0.254
- C. Check that the “Network ID” matches the SSID name of the wireless adapter.
- D. Check that “Security” setting is the same for both the wireless Adapter and the Access Point.

TROUBLESHOOTING

CHECKING THE USB CONTROLLER

To check that the socket controller is working properly:
Right click on "My Computer" icon on the desktop.



Select "Properties."

TROUBLESHOOTING

Select the "Device Manager" tab.

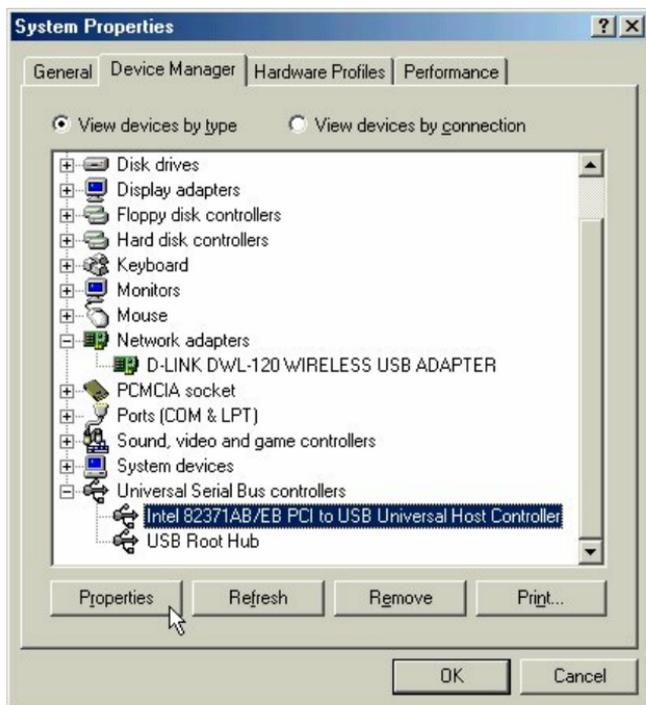


Figure 8 - USB Universal Host Controller

- Click on the (+) symbol next to "Universal Serial Bus controllers."
- Highlight the USB Universal Host Controller.
- Click "Properties."

TROUBLESHOOTING

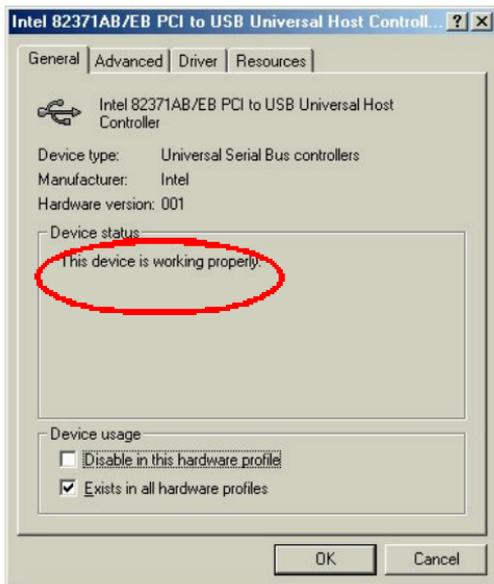


Figure 9 - USB Host Controller Device status

D. In the General tab, check under "Device status" to check that the USB Host controller is working properly.

TROUBLESHOOTING

CHECKING RESOURCES FOR A USB CONTROLLER

Select the "Resources" tab.

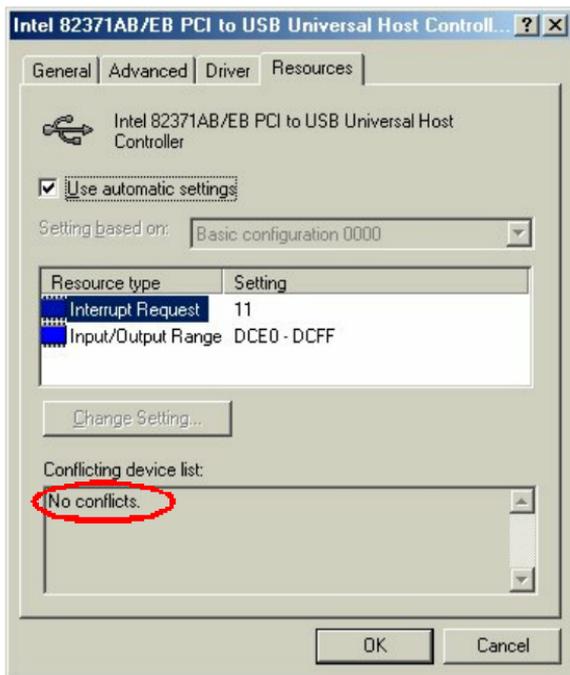


Figure 10 - Resources settings

- E. Check that there are no conflicts under the "Conflicting device list."
- F. If there is an existing IRQ conflict, please refer to the "How to Free an IRQ" section of "Troubleshooting."

TROUBLESHOOTING

HOW TO FREE AN IRQ

What to do if you don't have an available IRQ

If there is not an available (open) IRQs on your system, you can do the following.

The first thing you can do is let your Motherboard and Windows do the work for you. For this option you will need to check that you have a Plug and Play compatible Motherboard and set it to reset the configuration.

Note: All of the setting names below may not be the exact wording on your system. This is due to the great number of Motherboard and hardware manufacturers. The settings may be listed on your system using different words that mean the same thing. Refer to your motherboards' manual or contact the manufacturer if you are unsure.

Perform the following steps to check for a Plug and Play Motherboard and to reset the configuration.

1. Reboot your computer.
2. When your computer is going through its POST (Power On Self Test) enter into your BIOS(Basic Input/Output System).
3. Some BIOS's have a setting that will let you enable the Motherboard for Plug and Play. You should look for a setting that says "Plug and Play OS". "Enable" this function.
4. The second setting to look for is under the heading "PNP/PCI Configuration." Under this heading check to make sure that "Resources Controlled By" is set to "Auto."

TROUBLESHOOTING

HOW TO FREE AN IRQ

What to do if you don't have an available IRQ

continued

5. The next setting below should be “Reset Configuration” or “Reset ESSCD.” Set this to “Enabled.”
Note: This is a one-time setting. Meaning after you reboot your computer the setting will return to “Disabled.” This setting allows Windows to reconfigure all of the configuration information for your Plug and Play hardware. It is reset to “Disabled” so that Windows will not perform the reconfiguration each time you start your computer.
6. “Save” the new settings and Exit your BIOS. This will allow your computer to boot up and load Windows.
7. After Windows loads, check in the Device Manager to see if there is an available IRQ.

TROUBLESHOOTING

HOW TO FREE AN IRQ

If you do not have a Plug and Play Motherboard or you still do not have a free IRQ

If you do not have a Plug and Play Motherboard or you still do not have a free IRQ you might need to disable some unused Hardware. For instance if you have a PS/2 or USB Mouse then you might be able to disable your COM Ports.

Perform the following steps to disable your COM Ports.

1. Reboot your computer.
2. When your computer is going through its POST (Power On Self Test) enter into your BIOS (Basic Input/Output System).
3. Under the heading "Integrated Peripherals," look for "Serial Port 1 or 2" or "COM Port 1 or 2."
4. Change the setting to "Disable."
5. Go to the heading "PNP/PCI Configuration."
6. Make sure the setting for "Resources Controlled By" is set to "Auto."
7. Change the setting for "Reset Configuration" to "Enabled."
8. Hit the "ESC" key and go to the heading "Save and Exit."
9. Let Windows load and follow the steps to Checking for an Available IRQ.

TROUBLESHOOTING

HOW TO FREE AN IRQ

If you do not have a Plug and Play Motherboard or you still do not have a free IRQ

continued

Other hardware that can be disabled

Other hardware that can be disabled on your system might be what are referred to as “Built On.” If your Motherboard has a “Built On” Modem and you have upgraded your Modem you might want to see if it is disabled.

Perform the following steps to disable a “Built On” Modem.

1. Reboot your computer.
2. When your computer is going through its POST (Power On Self Test) enter into your BIOS (Basic Input/Output System).
3. Under the heading “Integrated Peripherals,” look for a setting “Modem COM Port.”
4. Change the setting to “Disable.”
Note: Only disable your “Built On” Modem if you know that you have upgraded your Modem, you have had a Broadband connection (Cable/DSL) installed, or if you do not use it to connect to the Internet. Disabling the “Built On” Modem will make it so it no longer functions, until reset to “enabled.”
5. Go to the heading “PNP/PCI Configuration.”
6. Make sure the setting for “Resources Controlled By” is set to “Auto.”

TROUBLESHOOTING

HOW TO FREE AN IRQ

If you do not have a Plug and Play Motherboard or you still do not have a free IRQ

continued

7. Change the setting for “Reset Configuration” to “Enabled.”
8. Hit the “ESC” key and go to the heading “Save and Exit.”
9. Let Windows load and follow the steps to Checking for an Available IRQ.

Other ideas for freeing up IRQs

If these steps do not free up an IRQ for you, you might need to remove some unused hardware from your system. The above steps can be followed to remove a “Built On” Sound Card as well. Another option for freeing up an IRQ is switching your Mouse either PS/2 or USB. This will free up the IRQs for your COM Ports and you should follow the above steps for disabling the COM Ports in your BIOS.

Note: You might need to contact your computer manufacturer for more information on freeing up an IRQ on your specific system.

NETWORKING BASICS

You may have had some ideas about how to use your new network prior to installing this product - sharing files, printing from an computer on the network, or accessing the Internet on multiple computers with one connection. This section will help you get started on those ideas or even give you some new ones. However, this section is not intended to be a comprehensive guide to networking, it is just an outline of a few networking basics.

If you are interested in learning more about networking, we have identified some Internet resources that may be of interest:

D-Link Systems, Inc.

<http://www.dlink.com>

D-Link is one of the largest manufacturers of Ethernet products in the world. D-Link's technological expertise and dedication to providing quality products at a low price makes D-Link a good place to watch for the newest in networking innovations. Or, you may want to get the newest drivers available for your Network Adapters.

NETWORKING BASICS


Computer Identification

If you had previously given your Windows 98/ME computers names, you may need to verify that each computer has a unique name and common workgroup name.

- A. On your Desktop, right-click the icon "Network Places" and select "Properties" from the context menu.



- B. Click the "Identification" tab on the top of the dialog box.

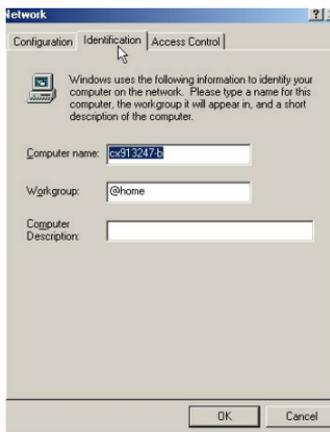

NETWORKING BASICS

Computer Identification

- C. Type a unique, identifying name for this particular computer in the "Computer name:" box. This will be the name that other computers on your network will use to communicate with this computer. Each computer's name must be unique on a particular network or confusion will result. (The computer's name should be 15 or fewer characters with no spaces.)
- D. Type the workgroup name this computer will be a part of in the "Workgroup:" box. All of the computers on your network should have an identical Workgroup name.
- E. The "Computer Description:" box is optional. You may enter a description that will help you identify this computer on your network. Then click "Close."
- F. Repeat this process for each computer on your network to ensure that they all have a unique "Computer Name" and identical "Workgroup."

NETWORKING BASICS


Sharing Files

With your computers connected together on a network, you may now open and save files on another computer. You will be able to specify particular folders or disk drives to "share" and even password protect them. The steps below will enable you to share specific files and folders with other computers on your network.

- A. On your Desktop, right-click the icon "Network Places" and select "Properties" from the context menu.



- B. This dialog box is where you will come to configure most of your computers network settings. It is also available through the "Network" icon in the Control Panel.

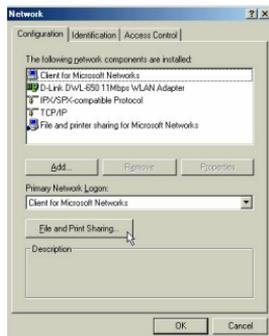


- C. Click the "File and Print Sharing" button.

NETWORKING BASICS

Sharing Files

D. Click to place a check mark next to "I want to be able to give others access to my files."

E. Click "OK" on the "File and Print Sharing" dialog box.

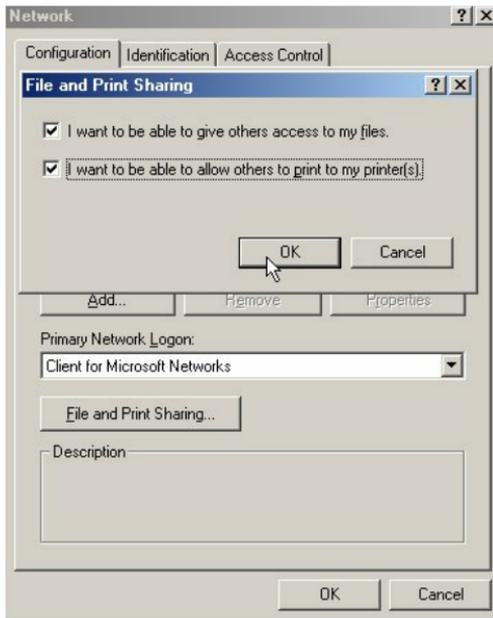

F. Click "OK" on the "Network" dialog box.

G. If prompted, provide the Windows 98 installation CD or direct


Windows to the proper location of the installation files.

Reboot if prompted.

NETWORKING BASICS

Sharing Files

- H. You will now be able to identify a particular folder or disk drive to share. You may want to share a folder that both you and a colleague/family member needs to access occasionally. Or, maybe you want to share a CD-ROM drive so your other computer that does not have one can read CD's. Both of these processes are the same. Only the disk drives and folders that you specifically identify as shared will be accessible to other computers on your network.
- I. Find the disk drive or folder you want to share with Windows Explorer or the "My Computer" icon on your desktop.
- J. Right-click on the disk drive or folder icon and select "Sharing."

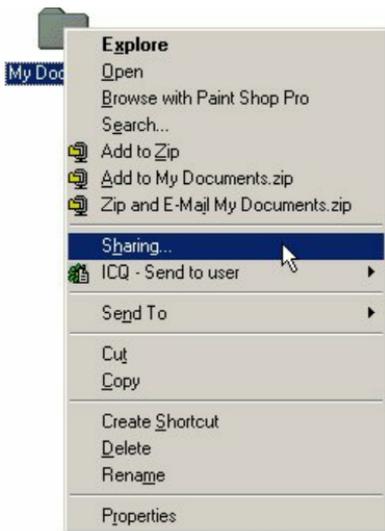

NETWORKING BASICS

Sharing Files

K. Select "Share As:" to set the parameters for sharing this particular disk drive or folder.



L. The "Share Name:" box is used to identify the disk drive or folder you are sharing to other computers on the network. You can give it any name you wish. However, a specific identification may help as more resources on your network are shared.

M. The "Comment:" box is optional. You can use this box to further describe the disk drive or folder for others on the network.

N. "Access Type:" allows you to designate how much someone else on the network can do with this disk drive or folder. "Read-Only" allow others to only look at or open the files on the disk drive or in the folder. "Full" allows others to read, write, open, save, copy, move, and delete files on the disk or in the folder. "Depends on Password" gives other computers access conditional upon the password they provide.

NETWORKING BASICS

Sharing Files

- O. "Passwords:" allow you to apply a level of security to your shared disk drives and folders. Another computer (user) will be required to enter the password you designate here before accessing the disk drive or folder. Two passwords are used to give two levels of security (or access) to others on the network using the "Depends on Password" setting. Leaving the "Password" boxes empty gives everyone on the network access to the disk drive or folder.
- P. Click "OK" to continue. You will be prompted to enter the password(s) you provided for verification. Retype the password(s) just as you entered them the first time.

NETWORKING BASICS

Sharing Files

- Q. You may now access this disk drive or folder from another computer on your network. Do so by double-clicking the "My Network Places" icon on your desktop or inside Windows Explorer.
- R. Navigate to the computer with the shared disk drive or folder (recognized by the "Computer Name" you provided), double-click. You should now see the disk drive or folder, double-click. If you specified a password when sharing this disk drive or folder, you will be prompted for the password.
- S. You can access a disk drive or folder shared over the network from most Windows 98/ME applications. To make this process easier, Windows allows you to map these disk drives and folders to a drive letter on another computer. For example, on a computer where you are accessing a shared folder from another computer, inside Windows Explorer right-click and select "Map Network Drive." You will then be able to assign an available drive letter. Checking "Reconnect at logon" allows Windows to map this network drive each time you start your computer.

NETWORKING BASICS

Sharing Printers

"Sharing" a printer connected to one computer with other computers on your network can be very convenient - allowing you to print from any computer on the network. The steps below will enable you to print with other computers on your network.


- A. On your Desktop, right-click the icon "Network Places" and select "Properties" from the context menu.



NETWORKING BASICS

Sharing Printers

- B. Click the "File and Print Sharing-" button.
- C. Click to place a check mark next to "I want to be able to allow others to print to my printer(s)."

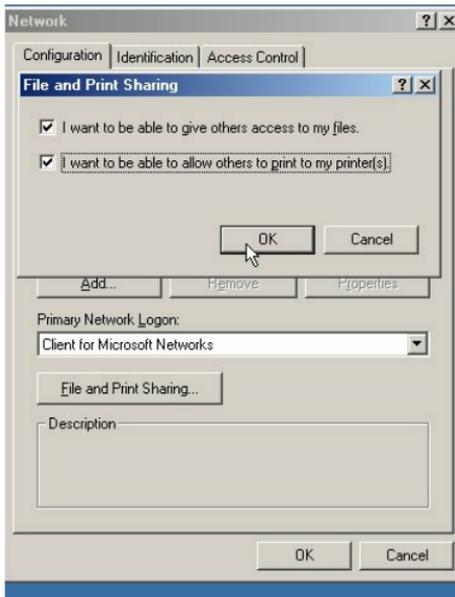

- D. Click "OK" on the "File and Print Sharing" dialog box.
- E. Click "OK" on the "Network" dialog box.
- F. If prompted, provide system files from the Windows CD and reboot the computer.


NETWORKING BASICS

Sharing Printers

G. You may now share any installed printers connected to this computer with other computers on your network.

From the "Start," select "Settings," then select "Printers."

Right click on the printer that you want to share with others on the network, and select "Sharing."

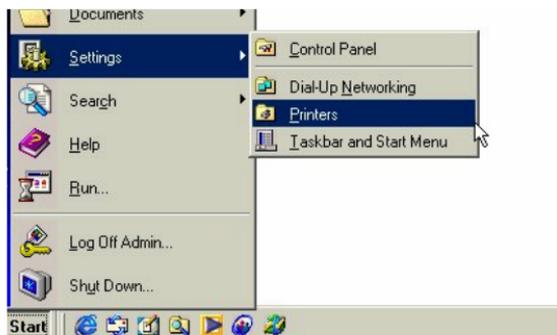

H. Click "Share As:" and provide a "Share Name:" to identify the printer to other computers on the network. "Comment:" and "Password:" are optional. Then click "OK."

For a computer to access a Network Printer, the device driver or software for that printer must be installed and pointed to the proper location of the printer. This is done much the same way you installed the printer on the computer it is connected to.

I. Go to a computer that does not have the printer connected to it. From the "Start" button on the Task Bar select "Settings" and then "Printers."

J. Double click the "Add Printer" icon.

K. The "Add Printer Wizard" will appear. Click "Next."


NETWORKING BASICS

Sharing Printers

L. Choose "Network printer" and click "Next."

M. Now you will identify the location of the Network Printer.

If you know the name of the computer and the share name of the printer, you can type it into the "Network path or queue name:" box. However, it is easier to click the "Browse" button and navigate to the location of the printer. Click "OK" when you have selected the desired printer. Finish the installation by continuing the "Add Printer Wizard" normally.

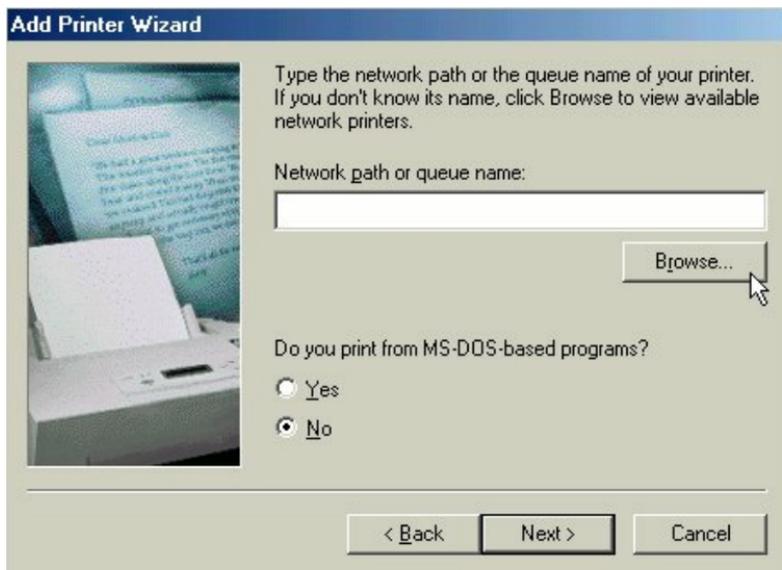


N. You may now use the Network Printer as if it was connected directly. Note: the computer that the printer is connected to must be on to use the printer. If you find this inconvenient, devices known as Network Print Servers are available from D-Link including the DP-301 and DP-101P. A Network Print Server would allow you to directly connect your printer to your network without worrying about which computer is 'on.'

NETWORKING BASICS

How to Install TCP/IP

By default, Windows 98/ME will install TCP/IP automatically.

Go to **START > Settings > Control Panel**

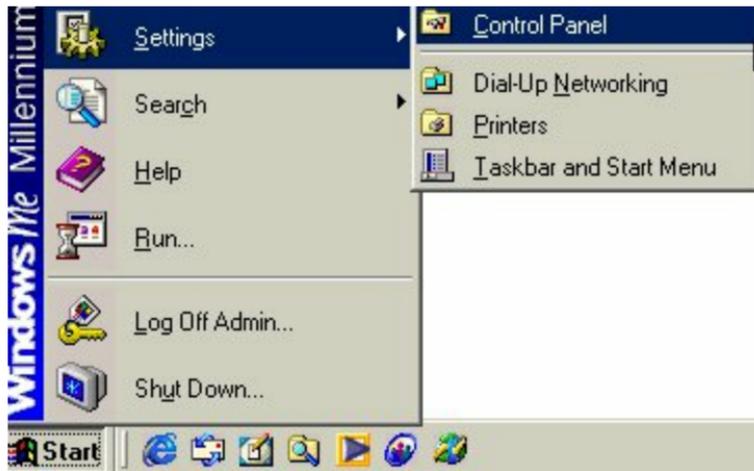

Double click on “Network.”

Control Panel

Network

Configures network hardware and software.

[Windows Update](#)

[Technical Support](#)


	Internet Options	Configures your Inter...
	Keyboard	Changes settings for ...
	Mail	Microsoft Outlook Pr...
	Modems	Installs a new mode...
	Mouse	Changes settings for ...
	Network	Configures network ...
	ODBC Data Sources (32bit)	Maintains 32 bit OD...
	Password	Configures network hardware and software. ...
	PC Card (PCMCIA)	Enables PCMCIA so...
	Power Options	Configures energy-sa...

NETWORKING BASICS


How to Install TCP/IP

Select the “D-Link DWL-120 Wireless USB Adapter”

Click on “Add.”

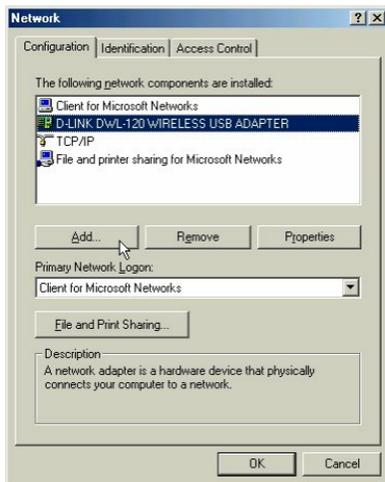

Select “Protocol.”

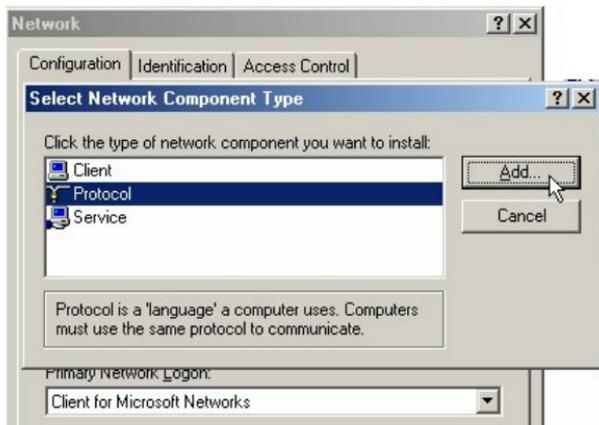


Click “Add.”

NETWORKING BASICS

How to Install TCP/IP

Select “Microsoft”

Scroll down and Select “TCP/IP”

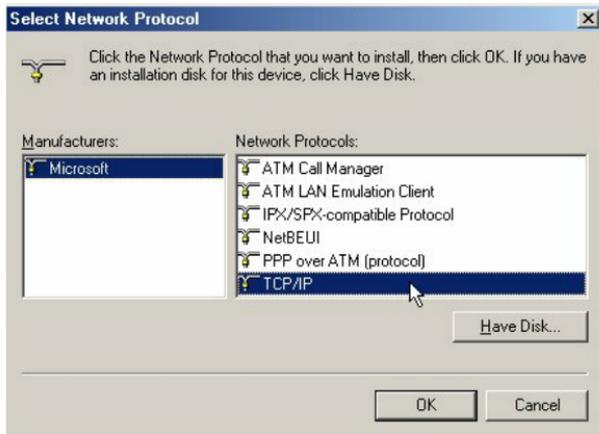

Click “Ok”

Now the “TCP/IP for D-Link DWL-650 Wireless Adapter” will be available.

The TCP/IP Installation is now complete.


NETWORKING BASICS

Configuring a Dynamic IP Address

When the drivers are installed, the default setting is set to obtain IP dynamically through a DHCP server.

If you need to check or change the settings, then do the following:

Go to **START > Settings > Control Panel**

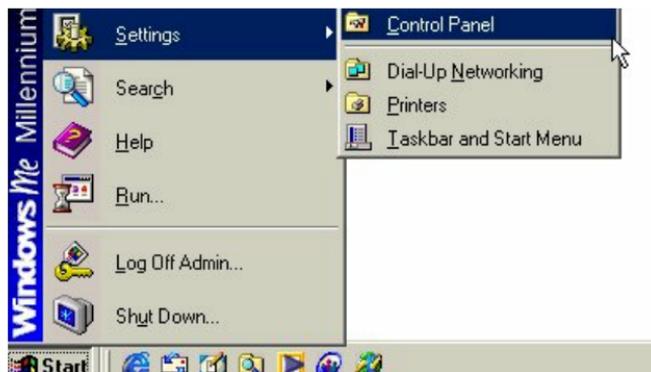

Double Click on “Network”

Control Panel

Network

Configures network hardware and software.

[Windows Update](#)

[Technical Support](#)


	Internet Options	Configures your Inter...
	Keyboard	Changes settings for ..
	Mail	Microsoft Outlook Pr...
	Modems	Installs a new mode...
	Mouse	Changes settings for ..
	Network	Configures network ...
	ODBC Data Sources (32bit)	Maintains 32 bit OD...
	Password	Configures network hardware and software.
	PC Card (PCMCIA)	Enables PCMCIA so...
	Power Options	Configures energy-sa...

NETWORKING BASICS

Configuring a Dynamic IP Address

Highlight TCP/IP for the DWL-120

Click on “Properties.”

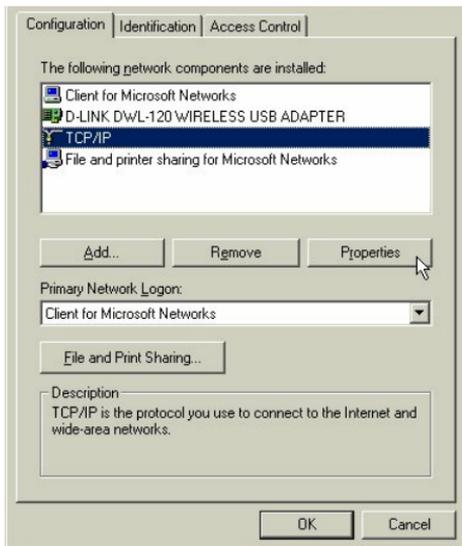


NOTE: *If TCP/IP is not present see Section 1: “How to Install TCP/IP.”*

NETWORKING BASICS

Configuring a Dynamic IP Address

When the TCP/IP window opens, choose “IP Address” tab.
Select “Obtain an IP Address Automatically.”

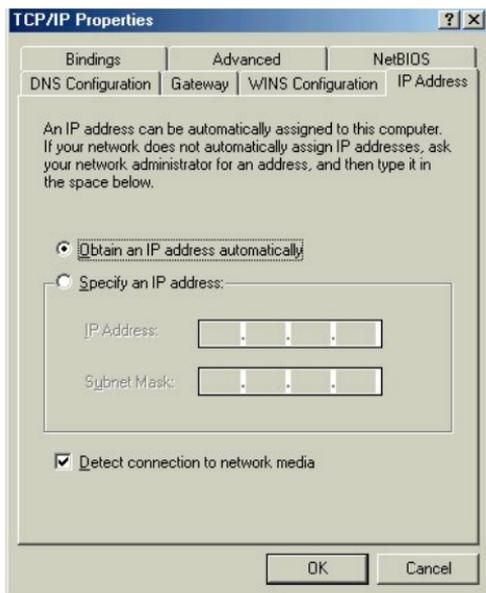

Click “OK.”


When the network properties window comes back up, click “OK.”

Windows will ask you to reboot and click “Yes.”


NETWORKING BASICS

Configuring a Static IP Address

Go to **START** > Settings > Control Panel

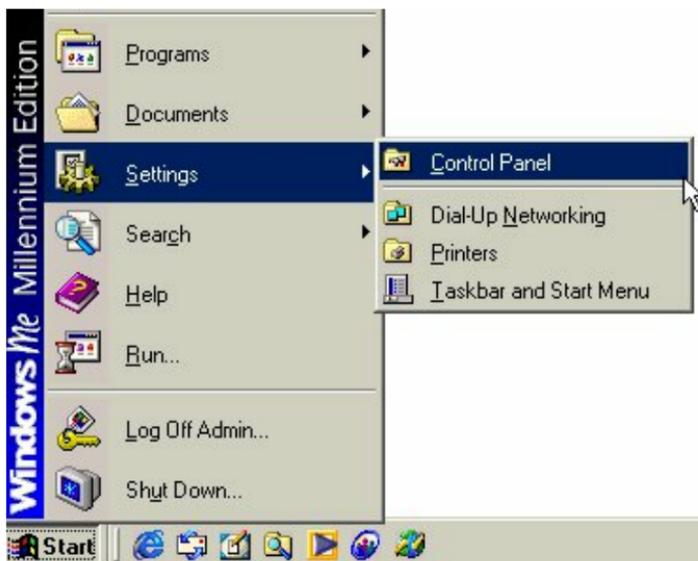

Double Click on “Network”

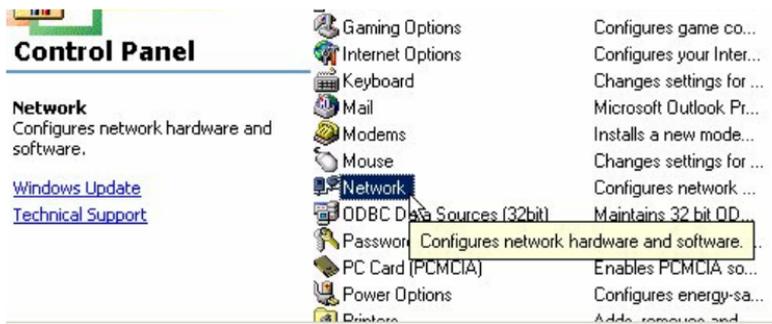


NETWORKING BASICS

Configuring a Static IP Address

Highlight TCP/IP for the DWL-120.

Scroll down if you cannot see it.

Click on “Properties”

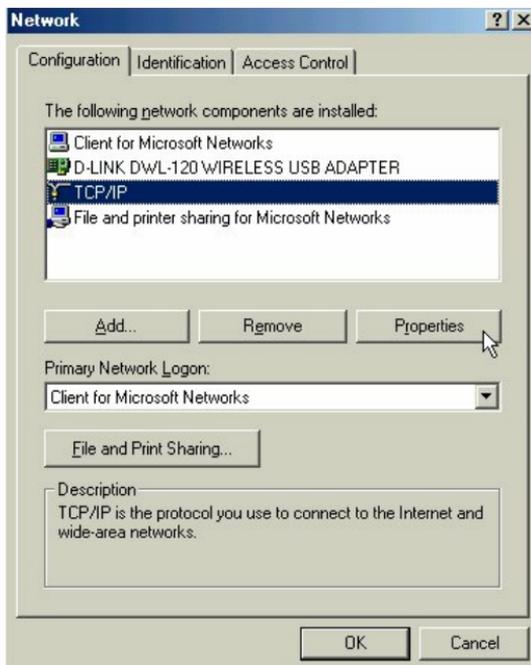


NOTE: *If TCP/IP is not present see Section 1: “How to Install TCP/IP.”*

NETWORKING BASICS

Configuring a Static IP Address

When the “TCP/IP Properties” window opens, choose “IP Address” tab.

Select “Specify an IP address.”

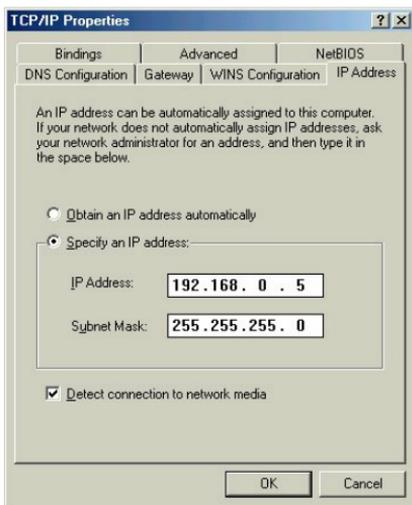

Enter an IP address into the empty field.

Suggested IP Range 192.168.0.2 to 192.168.0.254

NOTE: IP Addresses must be signed sequentially to each computer.

Suggested Subnet Mask of 255.255.255.0

Click “OK.”

When the “Network Properties” window comes back up click “OK.”

Insert Windows CD if prompted.

Windows will ask you to reboot and click “Yes.”

NETWORKING BASICS

Checking TCP/IP Address of the Wireless Adapter

Click on the Start button and click "Run."


Figure 11 - Start > Run




NETWORKING BASICS

Checking TCP/IP Address of the Wireless Adapter

Type "winipcfg" in the "Open" box.

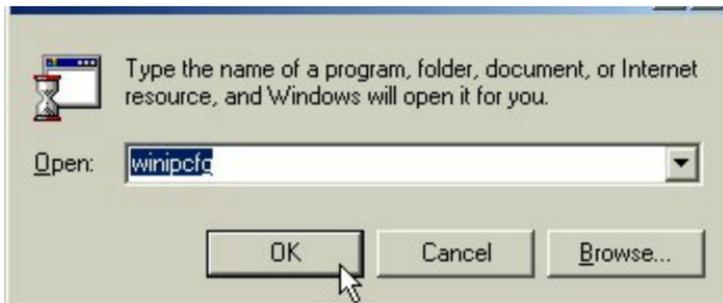

Click "OK". The IP Configuration screen will be displayed. The IP address will be displayed in the IP Address box.

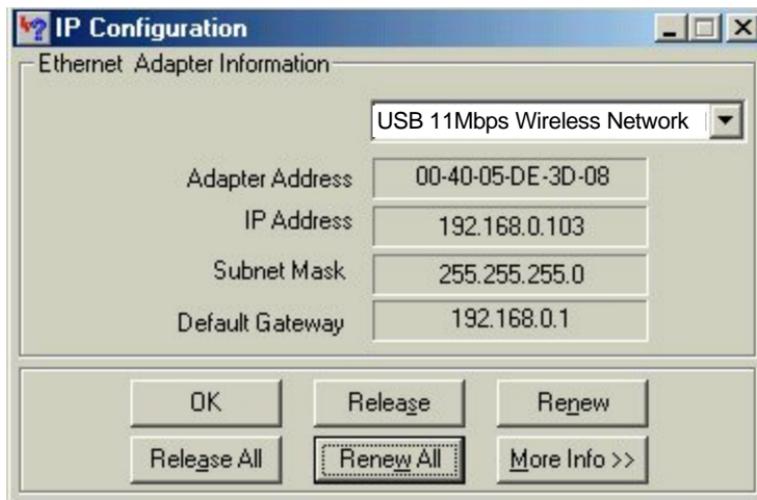

NETWORKING BASICS

Checking TCP/IP Address of the Wireless Adapter

Click on "More Info" to display additional IP information.

The screenshot shows the Windows IP Configuration dialog box. It is divided into two main sections: "Host Information" and "Ethernet Adapter Information".

Host Information:

- Host Name: PMLAPTOP1.us
- DNS Servers: 192.168.0.1
- Node Type: Hybrid
- NetBIOS Scope Id: (empty)
- IP Routing Enabled:
- WINS Proxy Enabled:
- NetBIOS Resolution Uses DNS:

Ethernet Adapter Information:

The adapter selected is "USB 11Mbps Wireless Network".

- Adapter Address: 00-40-05-DE-3D-08
- IP Address: 192.168.0.103
- Subnet Mask: 255.255.255.0
- Default Gateway: 192.168.0.1
- DHCP Server: 192.168.0.1
- Primary WINS Server: (empty)
- Secondary WINS Server: (empty)
- Lease Obtained: 12/14/00 2:37:25 PM
- Lease Expires: 01/25/01 6:37:25 AM

At the bottom of the dialog box, there are five buttons: "OK", "Release", "Renew", "Release All", and "Renew All".

NETWORKING BASICS

Checking the Connection by Pinging

Click on the Start button and click "Run."



Type "command" in the "Open" box.




Click "OK" to get to a DOS prompt.

NETWORKING BASICS

Checking the Connection by Ping

Type "ping 192.168.0.1", which is the IP address of the Gateway in this case, and hit the "Enter" key.

A successful ping will show four replies

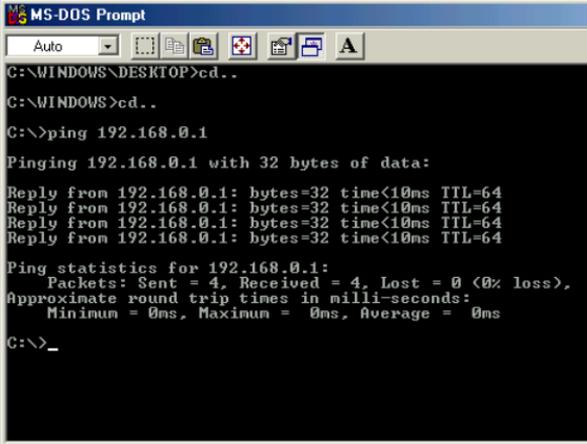

```
MS-DOS Prompt
Auto
C:\WINDOWS\DESKTOP>cd..
C:\WINDOWS>cd..
C:\>ping 192.168.0.1
Pinging 192.168.0.1 with 32 bytes of data:
Reply from 192.168.0.1: bytes=32 time<10ms TTL=64
Ping statistics for 192.168.0.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
C:\>_
```

CONTACTING TECHNICAL SUPPORT

D-Link provides free technical support. North American customers can contact D-Link technical support through our web site, e-mail, or by phone. North American technical support is available Monday through Friday from 6:00 a.m. to 6:00 p.m. (PST).

Web:

<http://www.dlink.com>

E-mail:

support@dlink.com

Phone:

949-788-0805 (option #4)

Thank you for purchasing this product. We like to receive feedback from our customers concerning our products. Please take a moment to visit our web site. You can register your purchase on-line, learn more about the newest networking products, and let us know the things your new network has empowered you to do.

TECHNICAL SPECIFICATIONS

Product Name:D-Link DWL-120

Model: DWL-120

Standards:

- IEEE 802.11b
- All major networking standards (including IP, IPX)

Adapter Type:

- USB 1.1

Transport Protocols:

- TCP/IP
- IPX/SPX
- NetBEUI

TCP/IP Protocols:

- BOOTP
- SNMP
- Telnet
- DHCP
- FTP

System Requirements:

- IBM compatible with Pentium 100 or faster processor.
- USB port

Supported OS:

- Windows 98
- Windows ME
- Windows 2000

Data Rate: Mbps/channel

- 11 : CCK
- 5.5 : CCK
- 2 : DQPSK
- 1 : DBSK

Data Security:

- 40 bit WEP Encryption

TECHNICAL SPECIFICATIONS cont.

Utility Software:

- Configuration Utility

Key Management:

- Automatic Dynamic Key Allocation (ADKA) through public key

Range:

- Indoor - per cell approximately 35 to 100 meters
- Outdoor - per cell approximately 100 to 300 meters

Diagnostic LED:

- Power, Network Link, Activity

Power Specifications:

- Operating Voltage: +5V, DC (+/-) 5%

Transmit Power:

- Nominal Temp. Range: 17 dBm
- Extended Temp. Range: 14 dBm min.
- Transmit Power, 2.7v to 3v: 14 dBm min.

Network Architecture:

- Supports Ad-Hoc Mode (Peer-to-Peer without Access Point) or Infrastructure Mode (Communications to wired networks via Access Points with Roaming)
- Compliant with IEEE 802.11b Standards

Antenna:

- External antenna supporting diversity
- Mobility: Seamless roaming across cell boundaries with handover

Frequency Range:

- 2.4 - 2.4835 GHz, Direct Sequence Spread Spectrum (DSSS)

Operating Channels:

- 1-11 United States (FCC)
- 1-11 Canada (DOC)

Physical Dimensions:

- L = 110 mm
- W = 72 mm
- H = 20 mm

Emissions:

- FCC
- CE
- VCCI
- IC

Temperature:

- Operating Temperature: -10°C to 55°C
- Storage Temperature: -20°C to 75°C

Humidity:

- Maximum up to 95% Non-condensing

Safety:

- UL

Warranty:

- One year limited warranty

Copyright ©2000 D-Link, all rights reserved. D-Link, DWL-120, DWL-1000AP, DWL-500, and DWL-650 are registered trademarks of D-Link. Microsoft Windows 98, Windows ME, Windows 2000, and Windows NT are trademarks of the Microsoft Corporation. All other trademarks are registered trademarks or trademarks of their respective holders. All specifications are subject to change without notice.

LIMITED WARRANTY

D-Link Systems, Inc. ("D-Link") provides this limited warranty for its product only to the person or entity who originally purchased the product from D-Link or its authorized reseller or distributor.

Limited Hardware Warranty: D-Link warrants that the hardware portion of the D-Link products described below ("Hardware") will be free from material defects in workmanship and materials from the date of original retail purchase of the Hardware, for the period set forth below applicable to the product type ("Warranty Period") if the Hardware is used and serviced in accordance with applicable documentation; provided that a completed Registration Card is returned to an Authorized D-Link Service Office within ninety (90) days after the date of original retail purchase of the Hardware. If a completed Registration Card is not received by an authorized D-Link Service Office within such ninety (90) day period, then the Warranty Period shall be ninety (90) days from the date of purchase.

<i>Product Type</i>	<i>Warranty Period</i>
Product (excluding power supplies and fans), if purchased and delivered in the fifty (50) United States, or the District of Columbia ("USA")	Standard (1) Year Warranty
Product purchased or delivered outside the USA	One (1) Year
Power Supplies and Fans	One (1) Year
Spare parts and spare kits	Ninety (90) days

D-Link's sole obligation shall be to repair or replace the defective Hardware at no charge to the original owner. Such repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement Hardware need not be new or of an identical make, model or part; D-Link may in its discretion may replace the defective Hardware (or any part thereof) with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. The Warranty Period shall extend for an additional ninety (90) days after any repaired or replaced Hardware is delivered. If a material defect is incapable of correction, or if D-Link determines in its sole discretion that it is

not practical to repair or replace the defective Hardware, the price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware (or part thereof) that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

Limited Software Warranty: D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original delivery of the Software for a period of ninety (90) days ("Warranty Period"), if the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. D-Link's sole obligation shall be to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. The Warranty Period shall extend for an additional ninety (90) days after any replacement Software is delivered. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

What You Must Do For Warranty Service:

Registration Card. The Registration Card provided at the back of this manual must be completed and returned to an Authorized D-Link Service Office for each D-Link product within ninety (90) days after the product is purchased and/or licensed. The addresses/telephone/fax list of the nearest Authorized D-Link Service Office is provided in the back of this manual. FAILURE TO PROPERLY COMPLETE AND TIMELY RETURN THE REGISTRATION CARD MAY AFFECT THE WARRANTY FOR THIS PRODUCT.

Submitting A Claim. Any claim under this limited warranty must be submitted in writing before the end of the Warranty Period to an Authorized D-Link Service Office. The claim must include a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same. The original product owner must obtain a Return Material Authorization (RMA) number from the Authorized D-Link Service Office and, if requested, provide written proof of purchase of the product (such as a copy of the dated purchase invoice for the product) before the warranty service is provided. After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. The packaged product shall be insured and shipped to D-Link, 53 Discovery Drive, Irvine CA 92618, with all shipping costs prepaid. D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

What Is Not Covered:

This limited warranty provided by D-Link does not cover:

Products that have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed;

Initial installation, installation and removal of the product for repair, and shipping costs;

Operational adjustments covered in the operating manual for the product, and normal maintenance;

Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; and

Any hardware, software, firmware or other products or services provided by anyone other than D-Link.

Disclaimer of Other Warranties: EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED "AS-IS" WITHOUT ANY WARRANTY OF ANY KIND INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO NINETY (90) DAYS. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

Limitation of Liability: TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-CONFORMING PRODUCT.

GOVERNING LAW: This Limited Warranty shall be governed by the laws of the state of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This limited warranty provides specific legal rights and the product owner may also have other rights which vary from state to state.

Trademarks

Copyright ©1999 D-Link Corporation. Contents subject to change without prior notice. D-Link is a registered trademark of D-Link Corporation/D-Link Systems, Inc. All other trademarks belong to their respective proprietors.

Copyright Statement

No part of this publication may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems Inc., as stipulated by the United States Copyright Act of 1976.

CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures

Warnung!

Dies ist in Produkt der Klasse B. Im Wohnbereich kann dieses Produkt Funkstoerungen verursachen. In diesem Fall kann vom Benutzer verlangt werden, angemessene Massnahmen zu ergreifen.

Advertencia de Marca de la CE

Este es un producto de Clase B. En un entorno doméstico, puede causar interferencias de radio, en cuyo case, puede requerirse al usuario para que adopte las medidas adecuadas.

Attention!

Ceci est un produit de classe B. Dans un environnement domestique, ce produit pourrait causer des interférences radio, auquel cas l'utilisateur devrait prendre les mesures adéquates.

Attenzione!

Il presente prodotto appartiene alla classe B. Se utilizzato in ambiente domestico il prodotto può causare interferenze radio, nel cui caso è possibile che l'utente debba assumere provvedimenti adeguati.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off

and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

VCCI Warning

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをして下さい。

Register by mail or online at <http://www.dlink.com/sales/reg/>

Registration Card

Print, type or use block letters.

Your name: Mr./Ms _____

Organization: _____

Dept. _____

Your title at organization: _____

Telephone: _____

Fax: _____

Organization's full address: _____

Country: _____

Date of purchase (Month/Day/Year): _____

Product Model	Product Serial No.	*Product installed in type of computer (e.g., Compaq 485)	*Product installed computer serial number

*Applies to adapters only.

Product was purchased from:

Reseller's name: _____

Telephone: _____

Fax: _____

Reseller's full address: _____

Answers to the following questions help us to support your product:

- Where and how will the product primarily be used?
 Home Office Travel Company Business Home Business Personal Use
- How many employees work at installation site?
 1 employee 2-9 10-49 50-99 100-499
 500-999 1000 or more
- What network protocol(s) does your organization use ?
 TCP/IP IPX/SPX Others _____
- What network operating system(s) does your organization use ?
 Novell NetWare SCO Unix/Xenix Linux Solaris
 Windows NT Windows 2000 Windows '98/ME Others _____
- What network management program does your organization use ?
 D-View HP OpenView/Windows
 HPOpenView/Unix SunNet Manager Novell NMS NetView 6000 Others
- What network medium/media does your organization use ?
 Fiber-optics CAT5 UTP Others _____
- What applications are used on your network?
 Desktop publishing Spreadsheet
 Word processing CAD/CAM Database management Accounting
 Others _____
- What category best describes your company?
 Aerospace Engineering Education Finance Hospital
 Legal Insurance/Real Estate Manufacturing Transportation/Utilities/Communication
 VAR Retail/Chainstore/Wholesale Government System house/company
 Other _____
- Would you recommend your D-Link product to a friend?
 Yes No Don't know yet
- Your comments ? _____

U.S. Postage
Required

TO:

D-Link®