GAMERLOUNGE
NETWORKING EVOLVED

D-Link ®

Existing Network > New Network

Existing Network

Broadband Modem

New Network

Broadband Modem

D-Link® Gaming Router
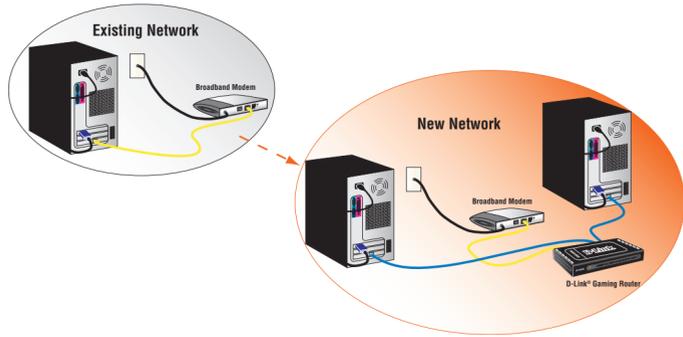
QUICK INSTALL GUIDE

WAN | 1 2 3 4 | DGL-4100

D-Link

MODEL: DGL-4100

Vertical Stands

Vertical stacking stands are provided so that you can place your D-Link® Gaming Router in a vertical position. Positioning the unit vertically saves space and allows the unit to remain cooler.

To attach the vertical stands, simply slide the vertical stands into the slotted grooves on the top and bottom panels of the D-Link® Gaming Router.

Rubber Feet

Rubber Feet are provided to allow proper ventilation when the D-Link® Gaming Router is placed horizontally or stacked upon other D-Link® stackable products.

To attach the rubber feet, simply press the rubber feet into the four corners on the bottom panel of the D-Link® Gaming Router.

Hardware Installation

TCP/IP Settings

IP Address:

____.____.____.____

Subnet Mask:

____.____.____.____

Default Gateway:

____.____.____.____

Primary DNS:

____.____.____.____

Secondary DNS:

____.____.____.____

PPPoE Settings

Name:

_____

Password:

_____

1 Unplug the power from your broadband modem and shut down your computer.

Broadband Modem

Section View of Rear Panel
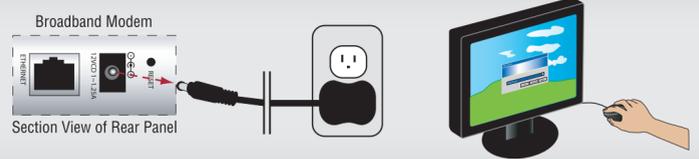
2 Disconnect the Ethernet cable connected from your computer to your broadband modem. Leave the end connected to your broadband modem attached.

3 Connect the end of the Ethernet cable removed from your computer to the WAN port on the router.

Broadband Modem

D-Link® Gaming Router

Connect to the WAN Port
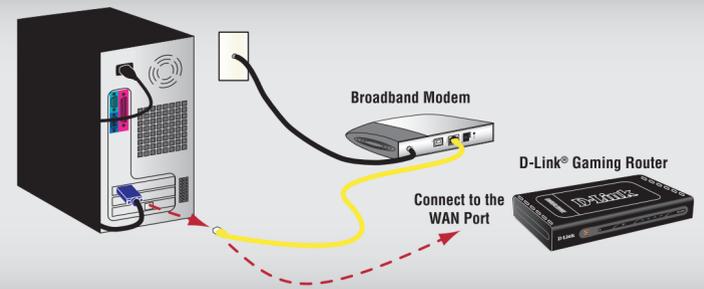
4 Connect the provided Ethernet cable from a numbered port on the router to your computer.

Broadband Modem

D-Link® Gaming Router
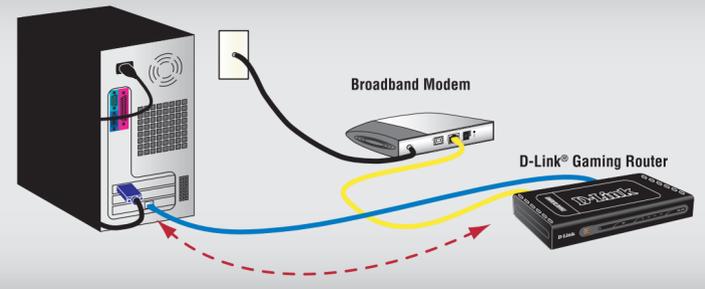
5 Plug the power back into your broadband modem and wait for the broadband modem to sychronize to the network (refer to the Modem manual for information on this).

Broadband Modem

Section View of Rear Panel

Broadband Modem

Power Cable Status Ether

Section View of LED Panel
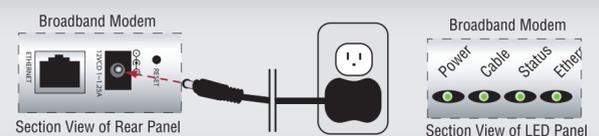
6 Plug the power adapter (provided with the router) into the router, then connect the other end to a power outlet and verify that the POWER LED on the router is on.

Note: If the Power LED is not lit, verify that the power adapter is properly connected to the D-Link® Gaming Router and to a working power outlet.

D-Link

D-Link

Power LED
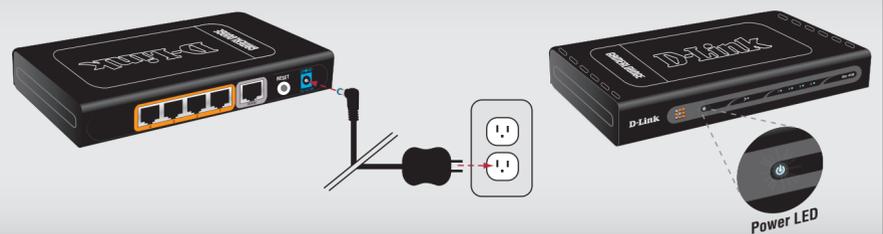
7 Power on your computer.

8 Verify that the WAN and LAN port (corresponding to where the computer was connected in step 4) LED's are on.

Note: If the WAN LED is not lit, check the connection of the Ethernet cable from the Broadband modem to the WAN port of the D-Link® Gaming Router as detailed in steps 2-3. If the LAN LED is not lit, check the connection of the Ethernet cable as detailed in step 4.

D-Link

WAN LED

LAN port LEDs

9 Launch your web browser and type in a web address such as **http://games.dlink.com** to verify that you have an Internet connection.

Address | http://games.dlink.com

10 If a web address is not accessible, enter **http://192.168.0.1** in your web browser address bar. Once the main screen appears, press the button labeled **Internet Connection Setup Wizard** and proceed through the wizard.

Address | http://192.168.0.1

For additional details on the Internet Connection Setup Wizard, please refer to the User Manual on the CD-ROM